

## INSTALLATION & OPERATING INSTRUCTIONS


### **SOCKET BOX DIGITAL SBST DIGI**

#### INSTALLATION – GENERAL NOTES:

1. INSTALLATION SHOULD BE CARRIED OUT IN ACCORDANCE WITH THE CURRENT EDITION OF THE I.E.E. WIRING REGULATIONS.
2. THE TIMER SHOULD NOT BE MOUNTED ON AN UNEARTHED METAL OR METALLISED SURFACE.
3. IF THE TIMER IS TO BE CONNECTED TO AN APPLIANCE THAT IS REQUIRED TO BE EARTHED THE SUPPLY EARTHING CONDUCTOR AND THE APPLIANCE EARTHING CONDUCTOR SHOULD BE TERMINATED TOGETHER IN THE EARTH TERMINAL PROVIDED WITHIN THE TIMER.

#### INSTALLATION – PROCEDURE:

1. SWITCH THE SUPPLY OFF AT THE MAINS. MEANS OF DISCONNECTION FROM THE SUPPLY HAVING AT LEAST 3MM CONTACT SEPARATION IN ALL POLES MUST BE INCORPORATED IN THE FIXED WIRING MAINS SUPPLY.
2. UNSCREW THE TWO SCREWS LOCATED TOP RIGHT AND BOTTOM LEFT OF FRONT MODULE COVER, REMOVE COVER AND GENTLY PULL MODULE FROM BACKPLATE. DO NOT PUT UNDUE STRESS ON, "OR" INTERFERE WITH FIXED BLUE WIRE. BARE WIRES BACK FOR 6mm (1/4inch) MAXIMUM; INSERT INTO TERMINALS AND SECURE WITH THE SCREWS, IN ACCORDANCE WITH CIRCUIT DIAGRAM LABEL BENEATH TERMINALS.
3. FIX BACKPLATE TO SOCKET BOX.
4. CONNECT WIRING IN ACCORDANCE WITH WIRING DIAGRAM.
5. FIT COVER OVER MODULE AND REASSEMBLE TO BACKPLATE. ENSURING FIXED BLUE WIRES ARE STOWED NEATLY WITHOUT BEING TRAPPED.
6. RE-FIT AND TIGHTEN COVER.
7. SWITCH ON MAINS.

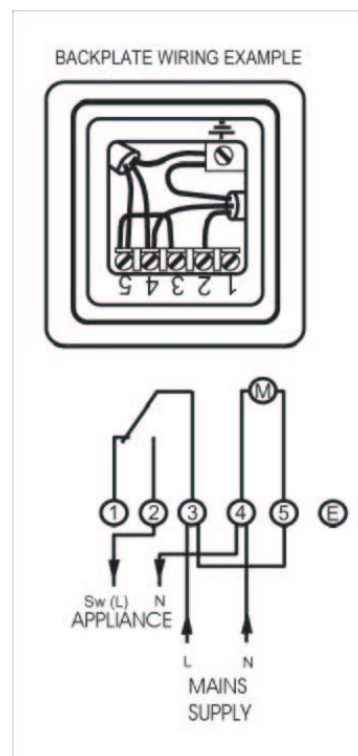

#### SETTING UP / PROGRAMMING

##### SETTING THE CLOCK

- 1/ PRESS AND HOLD THE **CLOCK** FACE BUTTON
- 2/ SET THE CURRENT **DAY, HOUR AND MINUTE** ( D,H,M)
- 3/ ONCE YOU HAVE SET THE DAY, HOUR AND MINUTE, RELEASE THE CLOCK FACE BUTTON

##### SETTING THE PROGRAMMES

- 1/ PRESS AND RELEASE THE **PROG** BUTTON
- 2/ INPUT THE DAY OR DAYS, HOURS AND MINUTES (D,H,M)
- 3/ PRESS THE **HAND** BUTTON ONCE, CIRCLE WITH A DOT SHOULD APPEAR ON DISPLAY INDICATING AN **ON** COMMAND
- 4/ PRESS **PROG** BUTTON AND REPEAT STEP 2 TO SET UP OFF TIME
- 5/ PRESS **HAND** BUTTON TWICE, CIRCLE WITHOUT A DOT TO INDICATE OFF COMMAND
- 6/ REPEAT STEPS 1 THROUGH 5 IF YOU WISH TO INPUT MORE PROGRAMME SETTINGS
- 7/ PRESS AND RELEASE THE **CLOCK FACE** BUTTON TO RETURN TO NORMAL TIME
- 8/ PRESS THE **PROG** BUTTON SEQUENTIALLY TO REVIEW OR CHANGE YOUR PROGRAMME SETTINGS
- 9/ WHEN DISPLAY SHOWS BLANKS WHERE THE TIME SHOULD BE, THIS IS YOUR NEXT PROGRAMME SLOT
- 10/ PRESS THE PROG BUTTON ONCE MORE AND AN FR NUMBER WILL BE DISPLAYED. THIS IS THE AMOUNT OF PROGRAMME SPACES UNUSED. NOW SIMPLY PRESS THE CLOCK FACE BUTTON TO RETURN TO NORMAL TIME.

**IMPORTANT NOTE:** IF FOR EXAMPLE YOU WANT THE UNIT TO COME ON AT 6 AM TILL 6 PM AND YOU ARE SETTING THIS PROGRAMME UP AT 11 AM THEN WHEN YOU FINISH YOU WOULD EXPECT THE TIMER TO COME ON. THIS IS NOT THE CASE, THE REASON IS THAT YOU HAVE ALREADY PASSED THE ON TIME, (6AM). TO OVER COME THIS SIMPLY PRESS THE HAND BUTTON AND THE HAND SYMBOL WILL SHOW IN THE DISPLAY AND THE UNIT WILL COME ON. THE TIMER WILL NOW STAY ON UNTIL NEXT PROGRAMMED OFF TIME AND SWITCH BACK TO TIMED MODE READY FOR NEXT PROGRAM