



## INSTALLATION INSTRUCTIONS

# MODEL: PA120 24 VAC BOOSTER / CLEANER PUMP RELAY

## INSTALLATION INSTRUCTIONS

1. Disconnect ALL power from the Mini-Wave Control Panel.
2. Remove the Deadfront Cover from the panel.
3. Remove the Low-Voltage Divider to gain access to the Relay Screws. (See Figure 1-1)
4. Remove the filler plate on the Low Voltage Divider by bending the plate back and forth until the plate breaks off. (See Figure 1-1).
5. Remove the two screws and install the Relay (PA120) with the same two screws. (See Figure 1-1).
6. Plug the 24VAC coil wires from the relay to any of the two available three-pin plugs on the upper control board. (See Figure 1-2).
7. Re-install the Low Voltage Divider in your Mini-Wave Control Panel. (See Figure 1-1).
8. Re-install Deadfront.
9. When installation is complete, button <3> on the Hand-Held Remote and Membrane Pad will operate the pump.

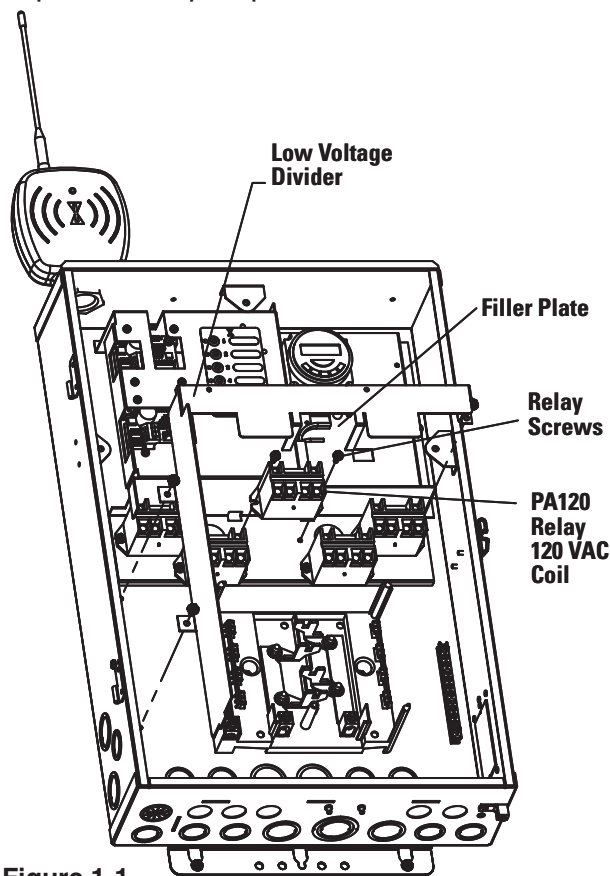


Figure 1-1

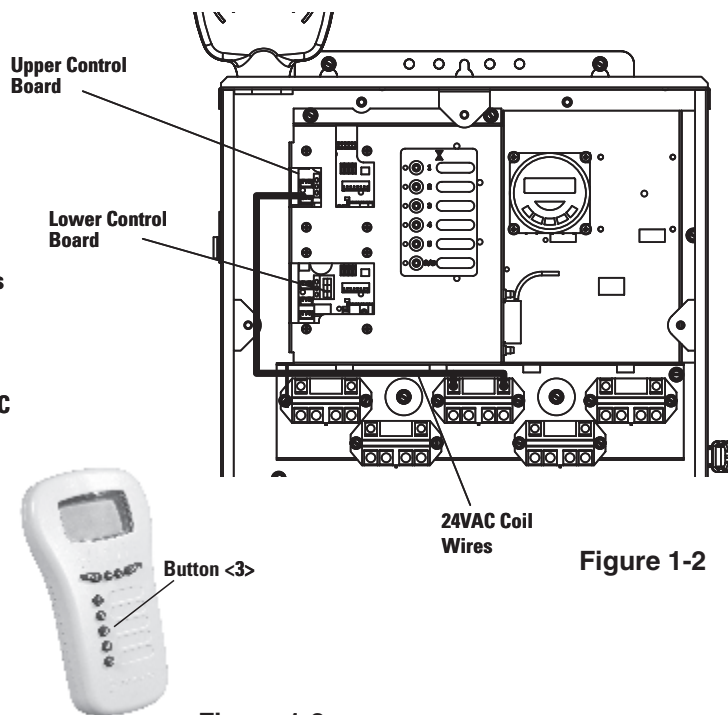


Figure 1-2

Figure 1-3

### LIMITED 1 YEAR WARRANTY

If within one (1) year from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, at its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

**INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.**

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing the product, along with proof of purchase, postage prepaid to the authorized service center listed below. This warranty is made by: Intermatic Incorporated, After Sales Service, 7777 Winn Rd., Spring Grove, Illinois 60081-9698, 815-675-7000 <http://www.intermatic.com> Please be sure to wrap the product securely to avoid shipping damage.

Order parts through your Intermatic Distributor.

*Because of our commitment to continuing research and improvements, Intermatic Incorporated reserves the right to make changes, without notice, in the specifications and material contained herein and shall not be responsible for any damages, direct or consequential, caused by reliance on the material presented.*

**INTERMATIC INCORPORATED**, SPRING GROVE, IL 60081-9698  
<http://www.intermatic.com>