http://waterheatertimer.org/How-to-wire-T104-Intermatic-timer.html#T104 http://waterheatertimer.org/Intermatic-Pool-timers-and-manuals.html

MODEL: T104R201 HYDRO-KING 2 CIRCUIT TIME SWITCH

 


 
IN TYPE 3R DUSTPROOF RAINPROOF ENCLOSURE, SUITABLE FOR POOL EQUIPMENT CONTROL IF INSTALLED 5 FT. OR MORE FROM EDGE OF POOL. FILTER CIRCUIT DOUBLE POLE SINGLE THROW (DPST) 40 AMP. RESISTIVE, PER POLE 120-480V. AC; 40 AMP INDUCTIVE OR TUNGSTEN OR 1000V.A. PILOT DUTY PER POLE 120-277V AC, 2 H.P. (24 FLA) - 120V. AC;

5 H.P. (28 FLA) - 240V. AC

HEATER CONTROL CIRCUIT: 10 AMP 250 VOLTS A C MAX
CLOCK MOTOR: 208-277V. 60 HZ.

CLOCK MOTOR VOLTAGE AND CYCLE MUST BE AS SPECIFIED. TO ORDER REPLACEMENT, INDICATE PART NO. (WG--) ON MOTOR COVER.





WIRING INSTRUCTIONS: To wire switch follow diagram above. Use solid or strand COPPER only wire with insulation to suit installation. See gauge selection table for normal service applications. To make power connections remove 1/2 inch of insulation from wire ends. Insert bare ends of wire under the pressure plate of terminals. Use 3/16 or larger screwdriver to tighten terminal screws firmly. (25 lb-in minimum). REPLACE INSULATOR BEFORE TURNING ON ELECTRICITY.

ı	MINIMUM COPPER	MAX. LOAD	MIN. INSUL- ATION	75° INSULATION MAX. MOTOR LOAD (HP)				
ı	WIRE SIZE	(AMP)		SINGLE PHASE		3 PHASE		
J	(AWG)		TEMP (°C)	120V	240V	240V	240V	
	14 12 10 8	15 20 30 40	60 60 60 75	1/2 1 2	2 2 1/2 3 5	N/A	N/A	



PROGRAMMING INSTRUCTIONS

- "ON" "OFF" AND TIMES: Hold trippers against edge of CLOCK-DIAL, pointing to time (AM or ON and **OFF** PM) when operations are desired. tighten tripper screws firmly. For additional tripper on CLOCK-DIAL order 156T1978A.
- TO SET TIME-OF-DAY: Pull CLOCK-DIAL outward. Turn in either direction and align the exact time-of-day on the CLOCK-DIAL (time now, when switch is put into operation) to TIME POINTER. DO NOT MOVE POINTER.

OPERATING INSTRUCTIONS

 TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER below CLOCK-DIAL left or right as indicated by arrows. This will not effect next operation.

CAUTION: You must turn heater off at least 15 minutes before manually turning off filter system.

 IN CASE OF POWER FAILURE, reset CLOCK-DIAL to proper time-of-day. See programming instructions.