

Ascend™ Smart In-Wall Timer Quick Start Up Guide

Before setting up your timer, please watch support videos at:
Intermatic.com/AscendSupport

Search for 'Ascend Intermatic' and download the app.



1. Open Ascend app and select "Skip For Now" or "Create Account" if remote access is needed.
2. Open mobile device Wi-Fi settings and select the timer SSID (7DT-xxx).
3. Enter password "**intermatic**".
4. Open the Ascend app and tap "New Timer" to set up.
5. Enter the requested 5-digit pin found in INFO/WIRELESS on the timer.
6. Follow the steps in the app to complete the set up.