

Talento 371/372 Plus





Safety precautions


- The connection and installation of electrical devices may only be carried out by a qualified electrician.
- Interventions in and changes to the device result in the voiding of the warranty claim.
- Observe your national regulations and the respective safety provisions.
- Fixed and flexible conductors of up to 10 mm² may be attached to the external terminal clips.
- Flexible cables with a cross-section $\leq 1 \text{ mm}^2$ should not be attached.

General information


- Deactivation commands take priority over activation commands.
- If the power supply is correct, the dots shown between the hours and minutes (HH:MM) are displayed permanently. The dots flash if the power supply is interrupted.
- If there is no power supply, the position indicator display goes out after 2 minutes.
- The whole display flashes the battery needs to be changed for up to 2 weeks to warn that.



Installation on DIN rail

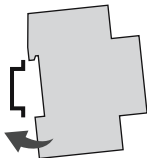


Terminal diagram

 


C1

 C2



C1

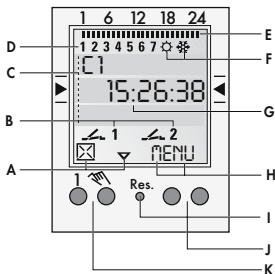

General information

- The middle communication line shows the selectable menu item. If confirmed with **OK**, this item is activated.
- Flashing texts or symbols require an entry.
- If no entries are made within the next 2 minutes, the clock reverts to auto mode.

Function displays of the two left-hand buttons:

- △ scroll up in menu
- ▽ scroll down in menu
- ☒ Select/reject suggestion
- ✓ Select/accept suggestion
- + Press briefly = +1
Press and hold (approx. 2 sec) = +5
- Press briefly = -1
Press and hold (approx. 2 sec) = -5

Display

- A Function displays of the two left-hand buttons
- B Channel status displays
 1 = Channel 1 ON
 1 = Channel 1 OFF
 Channel 1 = C1, Channel 2 = C2
- C 3 Communication lines for time display, Menu items, entry prompts etc.
- D Day-of-week display
- E Overview of daily switching program
- F Display of summer/winter time
- G Operating voltage (permanently lit dots)
Reserve power operation (dots flash)
- H Function displays of the two right-hand buttons


Buttons

- I Reset
The programs are retained in the case of a reset. The date and time must be set again. Press reset button with a blunt object (pen).
- J Right-hand buttons
- K Left-hand buttons with manual switch function in Automatic mode

Function displays of the two right-hand buttons:

- MENU** Exits the Automatic mode and enters the Programming mode
- ESC** Press briefly = one step back
Press and hold (approx. 2 sec) = return to Automatic mode
- OK** Make selection and apply
- EDT** Change request in Read mode
- NO** Do not execute command
- YES** Execute command
- DEL** Delete


Initial start-up - selection of menu language

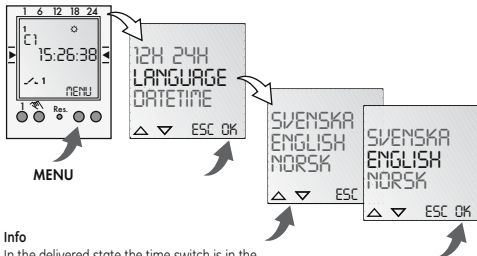


Info

In the delivered state the time switch is in the Auto mode with a preset time, date and the menu language English.

Prog.

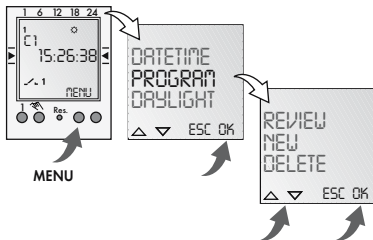

New program

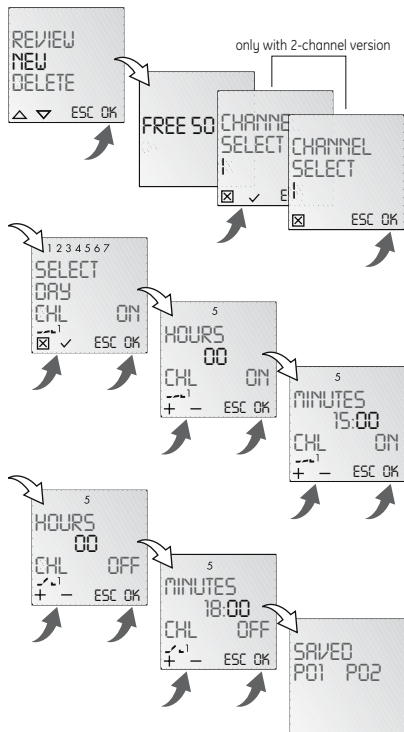

Info


The time switch has 50 memory spaces.

Example

ON command for channel 1 at 3 pm. OFF command at 6 pm.

- Select NEW program and confirm with **OK**.
- The free memory spaces are briefly displayed.
- Select channel and confirm with **OK**.
- Select day block or individual day (block formation as desired) and confirm with **OK**.
- Enter hour for ON command (+/-) and confirm with **OK**.
- Enter minute for ON command (+/-) and confirm with **OK**.
- Enter hour for OFF command (+/-) and confirm with **OK**.
- Enter minute for OFF command (+/-) and confirm with **OK**.
- Program is saved.
- Program jumps to selection REVIEW, NEW, DELETE. Now additional programs can be created.


View, edit program

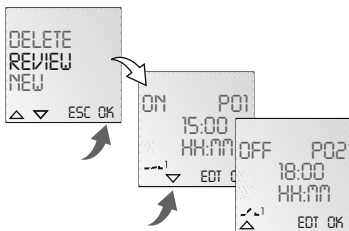

Info

- The program steps can be scrolled through with **▼▲**.
- The respective program can be edited by pressing **EDT**. The procedure is the same as when creating a new program.


Delete all programs

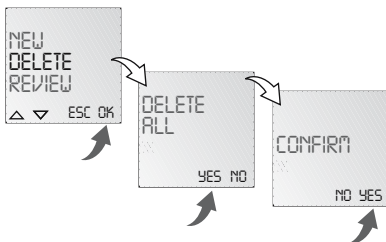

Info

- It is possible to delete all programs with **YES**.
- By pressing **NO**, individual programs can be deleted.

Delete individual programs

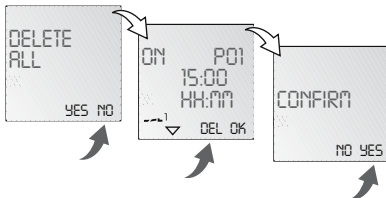


Info

When deleting individual programs, the corresponding program steps are deleted (e.g. P01 ON and P02 OFF).




Set date and time

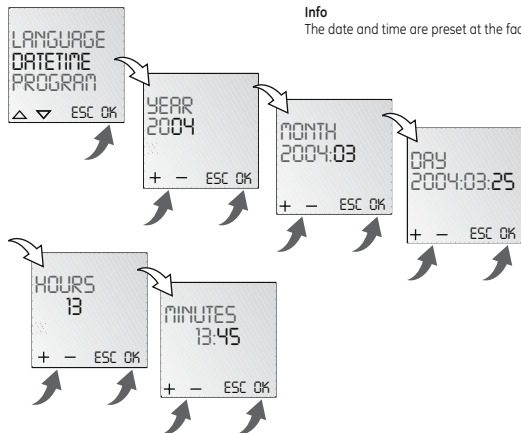

Info


The date and time are preset at the factory.

Set AM/PM (12-hour) or 24-hour display

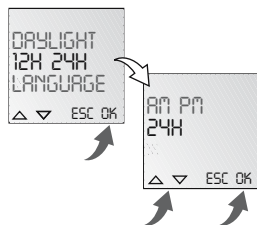



Switchover for summer/winter time

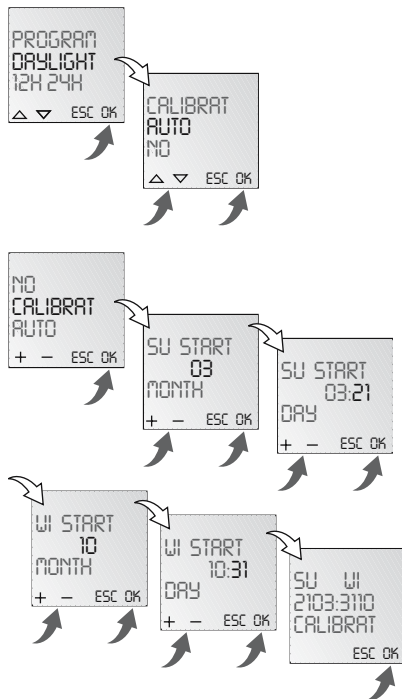

Info

The following settings are possible:

AUTO

Factory presetting of the published calendar dates. This is automatically recalculated for each year.

NO

No switchover

CALIBRAT


Programming. The start date of the summer time and winter time must be entered for this purpose. The factory presetting is overwritten. The programmed summer/ winter time is automatically recalculated for each year. The changeover takes place on the same specified day of the week in the same week of each month.

Example

03/21 Start summer time
10/31 Start winter time



Operating mode

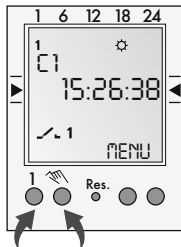

FIX ON: FIX
— 1

FIX OFF: FIX
— 1

AUTO: (no display) programmed switching times

Info

Left-hand button = Channel 1

Right-hand button = Channel 2 (only with 2-channel version)

Press 1 x = FIX ON = continuous ON

Press 2 x = FIX OFF = continuous OFF

Press 3 x = return to Auto mode



Technical Data

| | |
|------------------------------------|------------------------------|
| Dimensions H x W x D | 45 x 35 x 60 mm |
| Weight g (approx.) | 170 |
| Supply voltage | see imprint on device |
| Power consumption | 5 VA |
| Switching capacity | |
| - ohmic load (VDE, IEC) | 16 A/250 VAC |
| - inductive load cos φ 0.6 | 8 A/250 VAC |
| - Incandescent lamp load | 1,000 W |
| Switching output | potential-free |
| Switch contacts | 1 or 2 changeover contact(s) |

| | |
|------------------------------------|--------------------------------------|
| Ambient temperature | -13°F to 131°F (25°C to +55°C) |
| Protection class | II |
| Accuracy | typ. ± 2.5 s/day at 68°F (20°C) |
| Reserve power | 3 years from factory at +20°C (20°C) |
| Shortest switching time | 1 min. |
| Memory spaces | 50 |
| Block formation of day of the week | fixed/free selection |
| Switching status display | yes |
| Sealable | yes |