

# ARLEC

## Compact Digital Tube Timer

PC695

### Introduction

The PC695 has a total of 20 ON/OFF switching programs with 1 minute switching increments, each program can select individual days and various combinations of days. PC695 has a manual override and permanent ON/OFF abilities, random function, countdown function that turn's off the connected appliance up to 24 hours from manual ON, and an output 'ON' indicator light. This red light indicator indicates when power is available at the timer's socket, if the red light indicator is on, the connected appliance should be ON.

### Initial Set-up

- 1) Plug the timer into a mains outlet and switch on.
- 2) All segments of the display should flash on momentarily if the screen was blank prior to power up.

NOTE: If screen remains blank after connection to mains supply, leave unit for approx 14 hours to fully charge the battery before operation.


- 3) If unit was already operational before connection to mains outlet, reset unit by pressing small reset button using a paperclip or pen. The display segments should all illuminate and will reset to time 0:00

**READ INSTRUCTIONS CAREFULLY BEFORE INITIAL USE.**  
Keep in a convenient place for future reference.

### Explaining The Buttons

Read this section before attempting to program your timer.

- 1) **"RESET" Button**  
Clears all data in memory and resets the unit
- 2) **"CTD" Button**  
Set or cancel countdown function
- 3) **"OVER" Button**  
Shows mode "OFF - ON - AUTO" as selected by pressing this manual override button
- 4) **"RND" Button**  
Selects random mode
- 5) **"Down" Button**  
Moves time or program down when setting
- 6) **"UP" Button**  
Moves time up or moves screen up through programs when setting
- 7) **"TIME"**  
Sets current time, programs and countdown timer
- 8) **"SET" Button**  
Sets current time, programs and countdown timer
- 9) **"LCD Display"**  
Shows current time normally, program and function when programming
- 10) **"LED Indicator"**  
Indicates if unit is "ON" or "OFF" when connected to mains power

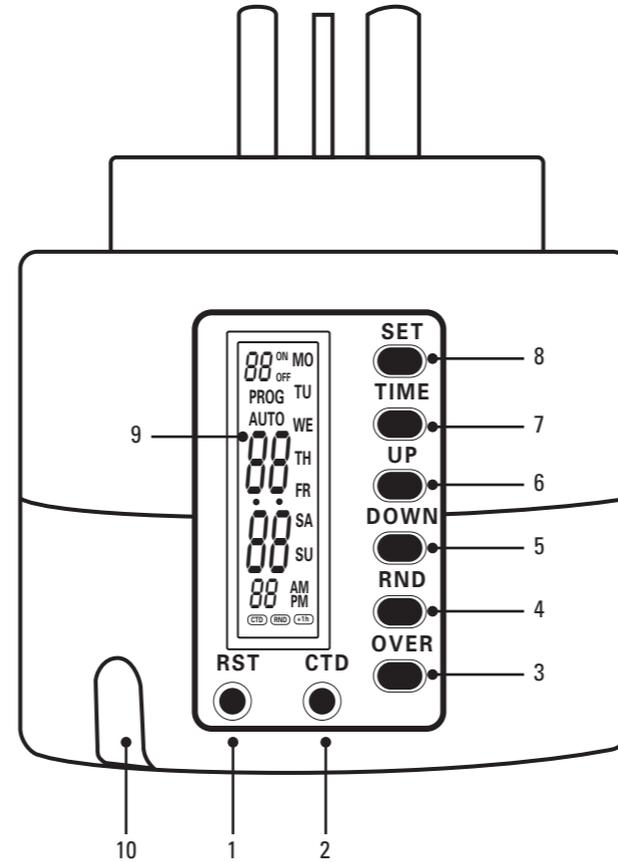

### To Set Present Time and Day

 
NOTE: The clock automatically operates in 24 hour mode. to change between 12 and 24 hour modes, hold "TIME" button down for approx 3 seconds. The AM or PM indication will be shown in the display for 12 hour mode.

The example diagrams are set out in 12 hour mode.


Example: To set day to Wednesday at 1.10pm



1. Press and hold the set button "SET" and the "Day of the week" display will flash. Set correct day of the week by using "UP" or "DOWN" buttons. press "SET" button to store selection.



 2. The hours digits on the clock display will now flash. Select the hour using the "UP" and "DOWN" buttons. Press the "SET" button to store selection.



3. The minute digits will now flash. Select the minutes using the "UP" and "DOWN" buttons. Press the "SET" button to store selection. The current day and time is now set.

NOTE: To reset or change time, repeat steps listed above



Clock appearance if set as 12 hour clock.




Clock appearance if set as 24 hour clock.


### To Program Timer

 By pressing the "UP" button you can scroll through all the timer setting displays and the countdown function display. There are a total of 20 timer settings displayed 20 "ON" and 20 "OFF" settings. Note: "ON" symbol identifies ON and "OFF" symbol identifies OFF

This diagram will help to explain how to set the timer function.



 Press the "UP" button, the display should appear as above. NOTE: One of the "ON - OFF - AUTO" settings will also appear at the lower left of the display.




1. Press the "SET" button. The days will flash on the LCD display, select the day/s required by scrolling with the "UP" button.




2. Pressing the "SET" button again will start the "HOUR" digit to flash, select the hour required by using the "UP" or "DOWN" buttons, press "SET". Repeat this step to set the minute setting.



 3. Press the "SET" button to complete the timer "ON" programming. The display should look similar to the diagram opposite.



 4. Press the "UP" button once the minutes have been set, the display will now scroll through to the "OFF" setting display. Repeat the steps as per the "ON" setting to set the "OFF" day and time. To program more timer settings, press "UP" and follow the previous step.



5. Use the "OVER" button to set the timer to "AUTO" mode when back in the clock display mode.

NOTE: Time display shown is in 12 hour time display, default display is 24 hour time. Use the "TIME" button to alternate between 24 and 12 hour time display by pressing for approx 3 sec to toggle between display formats.

### To Override Timer Programs

Timer programs may be disabled/turned off by pressing the "OVER" button whilst the relevant timer program is displayed. The display should look similar to this when disabled.

If re-enabled by pressing the "OVER button the timer display will revert back to the original day and time program.

## Preset Day Setting

The timer has been programmed with several day/week groupings. When programming the day of the week, this function can be used, follow the steps below.

When the day of the week is flashing in program mode, press the "UP" or "DOWN" button to select one of the following scenarios.

Press "SET" to select day/s. When selected the timer will switch "ON" on at the time on those day/s shown in the display.

### Scenarios available:

- 1) MO - TU - WE - TH - FR - SA - SU  
Select one of the seven week days by pressing the "UP" button repeatedly - (7th press).
- 2) MO - TU - WE - TH - FR  
Select from Monday through to Friday - (8th press).
- 3) SA - SU  
Select from Saturday to Sunday - (9th press).
- 4) MO - TU - WE - TH - FR - SA  
Select Monday to Saturday - (10th press).
- 5) MO - WE - FR  
Select from Monday to Friday - (11th press).
- 6) TU - TH - SA  
Select Tuesday, Thursday and Saturday - (12th press).
- 7) MO - TU - WE  
Select Monday, Tuesday, and Wednesday - (13th press).
- 8) TH - FR - SA  
Select Thursday, Friday and Saturday - (14th press).
- 9) MO - TU - WE - TH - FR - SA - SU  
Select Monday to Sunday - (15th press).

The timer "OFF" position can be set to any day or group of days also.

7

### Example:

#### Program 1

First setting	MO FR	6.00am	Switch ON
Second setting	MO FR	7.00am	Switch OFF

To set program-1 sample, first press UP once from the current time screen, it will lead you to the program number on screen. Press SET once to go to the day selection screen, and then press UP or DOWN to select the above sample days (from Monday to Friday). After days chosen press SET and it will bring you to on time selection screen, press UP or DOWN to change the program-1-on time, repeat to set minutes, afterwards press SET and it will bring you back to select program number. Press UP once to go to program-1-off. Repeat the previous to change the program-off day and time, when finished, press TIME to quit.

To select a different program number on/off time, go to the current time screen by pressing TIME once and continuously pressing UP and it will lead you to other program numbers on/off. There are a total of 20 on/off programs

To set the lamp to switch on and off overnight from Mon to Fri

#### Program 2

First setting	MO WE FR	7.00pm	Switch ON
Second setting	TU TH SA	2.00am	Switch OFF

Although the timer has 20 "ON" and "OFF" settings you do not have to use all the settings.

### Example:

You may choose only four switch settings

#### Program 1

First setting	1 ON WE	3.00pm	Switch ON
Second setting	1 OFF TH	11.00pm	Switch OFF

#### Program 2

Third setting	2 ON SA	12.00am	Switch ON
Fourth setting	2 OFF SU	2.00pm	Switch OFF

8

## Daylight Savings

The Compact Digital Time Switch incorporates a daylight savings advance function. When activated this automatically advances the clock forward an hour.



To activate: Press "TIME" and "DOWN" buttons simultaneously. A +1hr symbol will appear on the screen and the clock time will advance.

Simply repeat procedure to cancel.

## Manual Override Operation

The Compact Digital Time Switch can be used as a manual switch if desired. To turn power on to a device connected to the time switch, simply press the "OVER" button until the display shows "ON". To turn off and prevent timer operation toggle the "OVER" button so that display shows "OFF". If the timer is set to "ON"

and then switched across to "AUTO" by pressing the "OVER" button, the appliance will continue to remain "ON". The timer will switch "OFF" the appliance at the next programmed "OFF" time. If no "OFF" time is set then the timer will continue to stay "ON". This is also true in the "OFF" to "AUTO" position, the timer will stay "OFF" until the next set "ON" time is reached.

## Random Operation

Your Compact Digital Time Switch incorporates a random mode function so that the programs vary slightly from day to day. The random function

will place varying times of between 2 - 32 min on the preset programs to derive the random turn on times. To operate press "RND" button during normal clock operation. The RND symbol will appear when the random

 
9

function is activated. Press the "RND" button again to deactivate.

## Count Down Timer

The Compact Digital Time Switch also incorporates a countdown timer function. This is where the timer counts down from a preset time to zero and then switches an appliance off.

NOTE: The timer automatically resets to the present time after the countdown has completed.



To set the countdown timer for 1 hour 30 minutes and 30 seconds. From the normal "CLOCK" screen press the "DOWN" button. The "CTD" screen should appear on the display as shown.

10



1. To set the countdown timer, press the "SET" button. "SET" and hours digits will begin to flash. Use the "UP" or "DOWN" buttons to program the desired hours. Press the "SET" button to store selection.



2. The minutes digits will begin to flash. Set the desired minutes using the "UP" or "DOWN" buttons, push "SET" to store selection.



3. The seconds digits will now flash. Set the desired seconds using the "UP" or "DOWN" buttons and once again press "SET"

to confirm.

The display should now show the programmed countdown time with on flashing.

To activate countdown timing, simply press the "CTD" button from the Count Down display. The "CTD" icon and "AUTO" on the display will be shown indicating that the countdown timer is functioning.

NOTE: The time is reset at the completion of the countdown.

## User Hints

By holding the "UP" or "DOWN" buttons continuously whilst programming, the digits will scroll automatically, release button when required digit is reached.

The timer can be programmed whilst held in the hand without any need for being connected to mains power.

To operate always ensure that the appliance to be operated from time switch is switched on.

Time switch is not waterproof - for indoor use only.

Do not expose the timer to temperature extremes or strong direct sunlight.

Only clean unit with a damp rag. Do not use solvents or detergent.

The PC695 Compact Digital Tube Timer has a built in, rechargeable battery. If a power failure occurs or the unit is removed from the mains outlet, the rechargeable battery will power the time switch avoiding the loss of any preset programs.

NOTE: The rechargeable battery is a non-replaceable type. The battery will not provide power to any appliance during a power failure.

11

## Arlec Guarantee\*

Arlec guarantees this product against defects of materials and workmanship for a period of 12 months from the date of purchase provided that the product is used in accordance with Arlec's recommendations and within such voltage and current limits as are specified by Arlec in relation to the product. Arlec will at its own option make good, replace with the same or similar product, or provide credit for any product manufactured or supplied by it, which proves to be defective within the limits set out above provided that no repairs, alterations or modifications to the product have been undertaken or attempted, other than by the company or its authorised agents. Should the purchaser wish to make a claim under the guarantee, the product should be returned pre-paid to the place of purchase. This guarantee is in addition to and does not take away from any rights available to the consumer under the Trade Practices Act and the State consumer protection legislation.

## Proof of Purchase

Please retain your purchase receipt for all warranty claims.

# ARLEC

For all Sales enquiries

Phone (03) 9727 8860 Fax 1300 360 650

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 105 322).

CPIN002091

12