

Avanta Rhemha timer manual



Clear timer: Press Reset with paper clip and hold for few seconds. Repeat. Minimum time setting 1 minute. Lithium battery provides 5 year backup.

<http://waterheatertimer.org/Woods-timers-and-manuals.html#Remeha>

#1 Setting current time and current day:

- Slide "RUN" switch to left position.
- Press DAY button until arrow points to current day (M=Monday, T=Tuesday, etc.).
- Press HR to select current hour and then press MIN for current minute
- If clock is AM_PM, then choose correct for current time
- Slide "RUN" switch to RUN: The clock colon will blink between the hours and minutes.

#2 Program ON time

- Slide "RUN" switch to P1.
- Bulb icon will display, indicating ON time
- Press DAY button to cycle through choice of Day or Days of operation
- Arrow(s) will display under choice of Day(s) for Program 1 ON
- Press HR to select hour for ON and then press MIN to select minute for ON.
- Tip: choose 11:59 instead of 12:00 to avoid confusion if clock is AM_PM
- Slide "RUN" switch to RUN: The clock colon will display current time.
- OR press HR MIN buttons simultaneously to confirm programming.

#3 Program OFF time

- Slide "RUN" switch to P2.
- Dark Bulb icon will display, indicating OFF time
- Press DAY button to cycle through choices: Be sure to choose same day(s) of operation as ON.
- Arrow(s) will display under choice of Day(s) for Program 1 OFF
- Press HR to select hour for ON and then press MIN to select minute for OFF.
- Tip: choose 11:59 instead of 12:00 to avoid confusion if clock is AM_PM
- Slide "RUN" switch to RUN: The clock colon will display current time.
- OR press HR MIN buttons simultaneously to confirm programming.

#4 Autorun mode

- set time and day and desired switch cycles.
- slide set switch to "RUN" and mode switch to "AUTO". Switching will begin with the next switch-on set time.

#5 To switch the override ON

- slide mode switch to "I".
- the switch remains on indefinitely (circuit closed).

#6 To switch the override OFF

slide mode switch to "0". The switch remains off indefinitely (circuit open).

#7 Skip cycle

In automatic run mode, press the "X—>" button, the next program is skipped

#8 Setting error

If "EEE" appears, a setting error exists. The switch cycle number in error is shown. Slide set switch to p. press button until cycle is shown. review this and the following setting to correct error slide set switch to "RUN"

#9 Clear any setting

- slide the RUN switch to "P", press the lower "P" button to show switch cycle you want to clear.
- press 1...7 button until no days are indicated. Repeat for the following switch cycle. This on/off cycle is now inactive.

#10 Clear all

To erase all settings, press "R".