

SPECIFICATIONS


Operating voltage: 230-240V a.c. 50Hz
10A Resistive Load.
2400 W max

Not suitable for low energy, fluorescent, low voltage or discharge lamps.



Cat. D817SMART

SMART SECURITY SWITCH

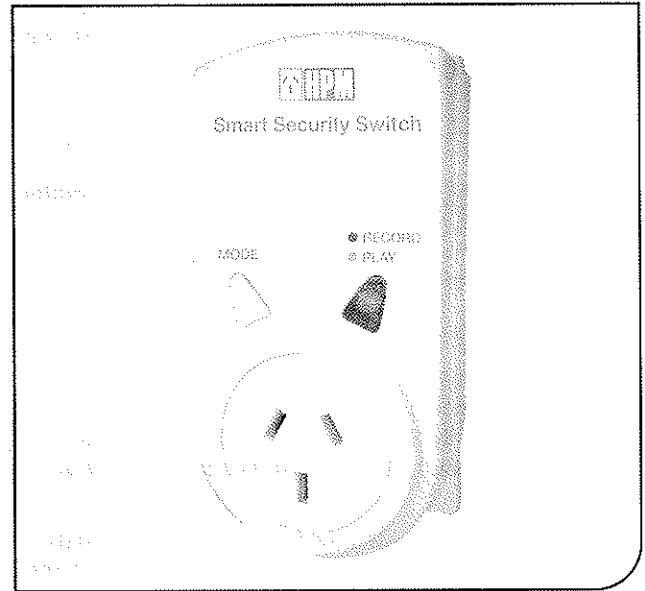

OWNER'S MANUAL

CUSTOMER SERVICE

For all Customer Service and Technical Support
Monday to Friday – during Business Hours

HPM AUSTRALIA
Phone: 1300 369 777
Fax: 1300 369 780
Website: www.hpm.com.au

HPM NEW ZEALAND
Phone: 0800 476 009
Fax: 0800 476 329
Website: www.hpm.co.nz



HPM Industries Pty Ltd
An Australian owned company

05/2003/1A

PLEASE READ ALL INSTRUCTIONS
CAREFULLY BEFORE USE



SMART SECURITY SWITCH INSTRUCTIONS

HPM's Smart Security Switch gives your home a lived in look when you are on holidays. Unlike ordinary timers, the Smart Security Switch doesn't turn your lamp, radio or festive lights on and off at exactly the same time every day. Instead, it controls your appliances in a realistic pattern – yours.

It remembers the times you switched your appliances on and off over the last 7 days, and replays your pattern.

INSTALLATION

Step 1

Plug the Smart Security Switch into a power outlet and switch the outlet on.

The first time you plug in your Smart Security Switch, the light will be coloured red and green while the memory initialises. Wait 30 seconds before proceeding.

Step 2

Press the 'MODE' button once. As you release the button, the light will turn red. This indicates that the Smart Security Switch is in 'RECORD' mode. Plug your appliance into the Smart Security Switch outlet.

Step 3

Use your appliance as you normally would. The Smart Security Switch records your appliance's ON/OFF operation. Leave plugged in and in use for at least 24 hours.

The Smart Security Switch records the ON/OFF pattern of your appliance for up to 7 days. If plugged in for more than 7 days, it will overwrite the earlier days, keeping the most recent usage in its memory.

NOTE: Appliances that stay in 'standby mode' when switched off may register as always ON by the Smart Security Switch as they draw a small amount of current at all times. Using the Smart Security Switch with these appliances is not recommended.

WHEN YOU GO ON HOLIDAY

Step 1

Turn your appliance ON at its switch.

Step 2

Press the 'MODE' button once. The light will turn green; this indicates it is in 'PLAY' mode.

Step 3

The Smart Security Switch will 'replay' your ON/OFF pattern of the previous 7 days. If the Smart Security Switch has not been in use for 7 days, it will replay the ON/OFF patterns recorded.

NOTE: Take care not to press the button too many times. If the light turns red and green, the memory will be cleared. See 'Resetting your Smart Security Switch' below.

RESETTING YOUR SMART SECURITY SWITCH

The Smart Security Switch is reset every time you switch out of 'PLAY' mode. See above for more information on 'PLAY' mode.

Step 1

When the light is green press the 'MODE' button and hold until the light changes to red and green.

Step 2

After 30 seconds, the unit will have finished resetting its memory. Press the 'MODE' button to change the light to red. The Smart Security Switch will start to record your appliance usage once more.

NOTE: This unit has an inbuilt rechargeable battery. The battery keeps your settings in the event of a power failure or if you want to move the unit to another outlet. When not plugged into the mains power, the battery will last for around 6 hours. If a power failure lasts longer than 6 hours, the unit will return to the 'reset' state (red and green lights on) when power is returned.