



Operating Instructions



NEMA 3R Enclosure

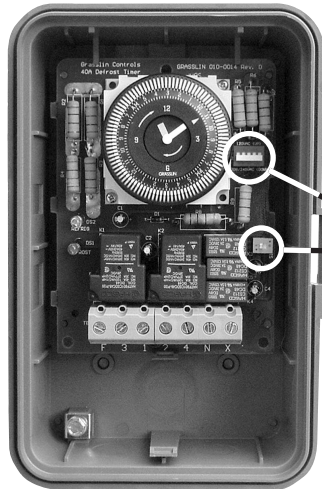

DTMV40 Time Initiated, Temperature, Pressure or Time Terminated Multi-Voltage Defrost Timers

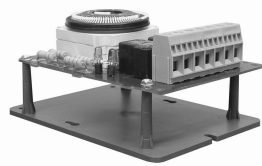

Bracket Mount



STARTUP PROCEDURE

- Determine model to be replaced (Grasslin or Competitors) from table below.
- Set Mode Selection (S1 BLUE DIP Switch – Fig. A) See table below and instructions on page 5.
- Apply corresponding Terminal Identification and Door labels –see retrofit kit instructions.
- Set correct input voltage (S2 RED DIP Switch – Fig. B).
- Follow installation and programming instructions.

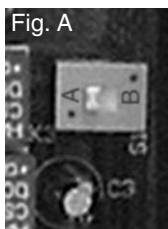


Fig. A

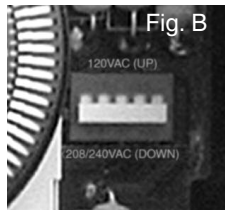


Fig. B

The DTMV40 can be configured for either 120 or 208/240VAC. Locate RED DIP Switch to the right of timer module. For:

- 120VAC slide DIP switch UP
- 208/240VAC slide DIP switch DOWN



| Paragon | Precision | Mode Selection | Wiring Diag. |
|---|-----------|----------------|--------------|
| TIME INITIATED, TIME TERMINATED | | | |
| <input type="checkbox"/> 8045/8046 | 6045 | A | 1 |
| <input type="checkbox"/> 8041 | 6041 | A | 2 |
| <input type="checkbox"/> 8043 | 6043 | B | 3 |
| <input type="checkbox"/> 8047 | 6047 | B | 4 |
| TIME INITIATED, REMOTE TEMPERATURE OR PRESSURE TERMINATED | | | |
| <input type="checkbox"/> 8145 | 6145 | A | 5 |
| <input type="checkbox"/> 8141 | 6141 | A | 7 |
| <input type="checkbox"/> 8143 | 6143 | B | 8 |
| TIME INITIATED, PRESSURE TERMINATED (Separate Pressure Switch Required (see instructions)) | | | |
| <input type="checkbox"/> 8245 | 6245 | A | 10 |
| <input type="checkbox"/> 8243 | 6243 | B | 11 |
| <input type="checkbox"/> 8247 | 6247 | B | 12 |
| Grasslin | | | |
| <input type="checkbox"/> | DT040 | A | 5 |
| <input type="checkbox"/> | DT140 | A | 5 |
| <input type="checkbox"/> | DTMV | A | 5 |
| <input type="checkbox"/> | DTSX | A | 5 |

INSTALLATION

Note: For outdoor locations, Raintight, or wet location conduit hubs that comply with requirements of UL 514B (standard for fittings for conduit and outlet boxes) are to be used.

- Open door and then remove interior protective cover by releasing spring clip on bottom.
- Remove timer mechanism by releasing spring clip on bottom.
- Select knockouts to be used. Remove inner 1/2" knockout by inserting a screwdriver in the slot and carefully punch knockout loose. Remove slug. If 3/4" knockout is required, remove the outer ring with pliers after removing the 1/2" knockout. Smooth edges with knife if necessary.
- Place enclosure in desired mounting location and mark the three mounting holes (refer to diagram). Start by placing set screw on top and attaching enclosure over keyhole; then screw in remaining two screws on bottom.
- Connect conduit hubs to conduit before connecting the hubs to the enclosure. After inserting hubs into enclosure, carefully tighten hub lock nut. Do not over-torque.
- Verify voltage selection. 120VAC – position switch UP; 208/240VAC – position switch DOWN (refer to Fig. B).**
- Wire in accordance with National and Local Codes.
- Grounding: Terminate all ground wires to ground lug on bottom of enclosure.
- Replace interior protective cover.

CAUTION: Do not check circuits by "sparking" wires to terminals. Damage to the defrost timer may result.

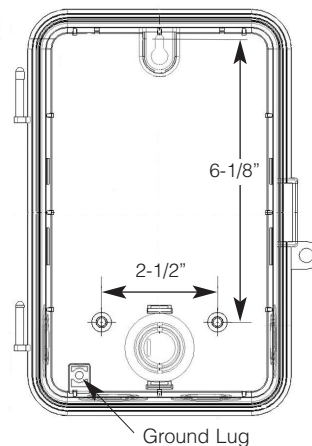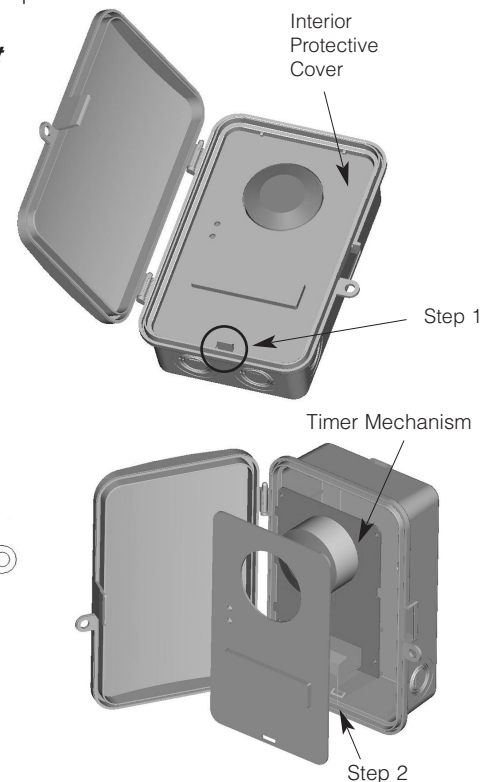

Ground Lug

Model Designation

| Models | Enclosure Mount |
|------------|---|
| DTMV40 | 24-hour, Outdoor NEMA 3R Enclosure |
| DTQMV40 | 24-hour w/Battery Backup, Outdoor NEMA 3R Enclosure |
| DTMV40-IM | 24-hour, Indoor Metal NEMA 1 Enclosure |
| DTQMV40-IM | 24-hour w/Battery Backup, Indoor NEMA 1 Enclosure |

| Models | Non-Enclosure Mount |
|-----------|--|
| DTMV40-M | 24-hour, Mechanism Only |
| DTQMV40-M | 24-hour w/Battery Backup, Mechanism Only |
| DTMV40-P | 24-hour, Panel Mount |
| DTQMV40-P | 24-hour w/Battery Backup, Panel Mount |
| DTMV40-B | 24-hour, Bracket Mount |
| DTQMV40-B | 24-hour w/Battery Backup, Bracket Mount |

Note: All units with Battery Backup provide up to a week of reserve carryover.

PROGRAMMING (Synchronous and Quartz Electromechanical Models)

Setting the Time:

Turn the minute hand clockwise until the time of day (and AM or PM) on the outer dial is aligned with the triangle marker on the inner dial.

DO NOT ROTATE MINUTE HAND COUNTER-CLOCKWISE

Setting Defrost Initiation Time:


Move a white tab (tripper) on the outer dial outward at each desired initiation time. For example, to set defrost initiation times at 6:00AM, 11:30AM, 4:30PM and 11:00PM, move the tab adjacent to the "M" in AM on the dial (6:00AM), the tab that lies between 11:30AM and 11:45 AM, the tab between 4:30PM and 4:45PM, and the tab adjacent to the 11:00–11:15PM marks. (See note for 8243/6243 replacement.)

Setting Maximum Defrost Duration:

Different defrost durations may be set for each defrost initiation setting. Each white tab (tripper) provides a 15 minute interval. The tabs that set the initiation time provide a minimum of 15 minutes of defrost. For longer defrost duration, move additional tabs (following in time) from the initiation tab. For example, if a 45 minute defrost is to start at 7:00AM, move the tab outward that lies between 7:00 and 7:15 on the AM side of the dial, and the tabs adjacent to 7:15-7:30 and 7:30-7:45.

(3 tabs moved outward). The defrost will initiate at 7:00AM and time terminate at 7:45AM (if temperature termination does not occur first.)

For electronic models, refer to separate programming instructions.

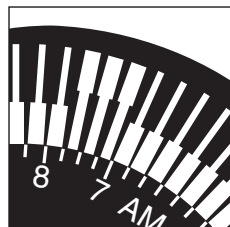

DTMV40 TROUBLESHOOTING GUIDE


MODE A (See page 1)

In Refrigeration Mode

Arrow on timer points to current time.




"1 & F" Make
"1 & 3" Break

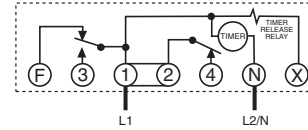


"2 & 4" Make

In Defrost Mode

Arrow on timer points to current time.

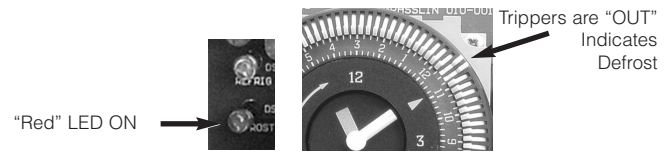

"1 & F" Break
"1 & 3" Make

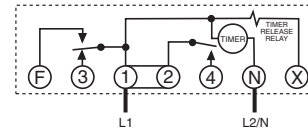

"2 & 4" Break

DTMV40 TROUBLESHOOTING GUIDE

MODE B (See page 1)


In Refrigeration Mode

Arrow on timer points to current time.



Both LED's ON

"1 & F" Make
"1 & 3" Break

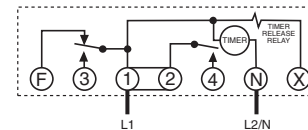

"2 & 4" Break


In Defrost Mode

Arrow on timer points to current time.



Both LED's OFF

"1 & F" Break
"1 & 3" Make

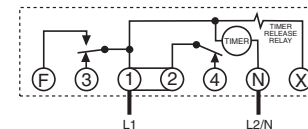


"2 & 4" Make

Note: It is necessary to apply power across terminals 1&N in order to perform electrical test.


TYPICAL WIRING DIAGRAMS

All switch positions are shown in refrigeration cycle operation, and change position upon initiation of a defrost.


DTMV40 Time/Time –Electric Defrost Wiring Diagram
1 8045 Replacement
 Mode A with 8045 Label Applied

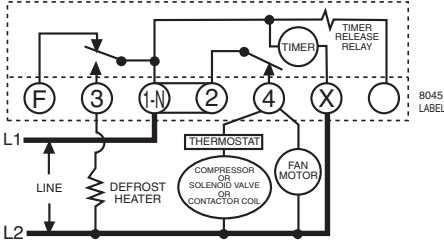

DTMV40 Time/Time–Electric Defrost Wiring Diagram
2 8041 Replacement
 Mode A with 8041 Label Applied

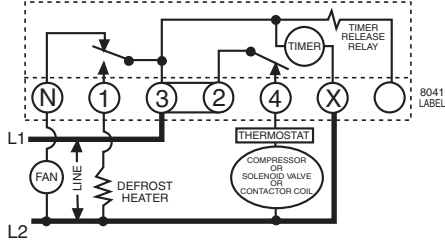


DTMV40 Time/Time–Hot Gas Defrost Wiring Diagram
3 8043 Replacement
 Mode B with 8043 Label Applied

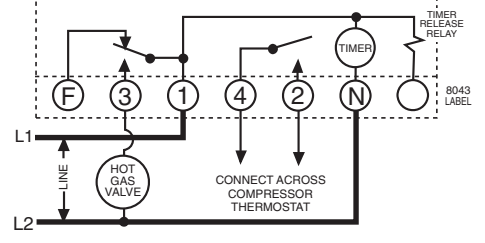


NOTE: Remove Bridge Between 1–4

DTMV40 Time/Time–Electric Defrost Wiring Diagram
4 8047 Replacement–Double Pole Switching
 Mode B with 8047 Label Applied

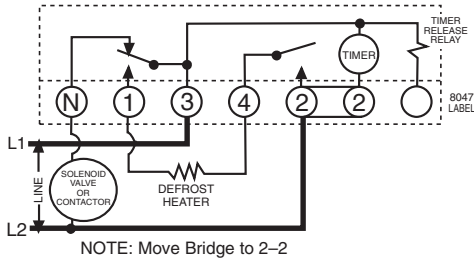


NOTE: Move Bridge to 2–2

DTMV40 Time/Temp.–Electric Defrost Wiring Diagram
5 8145 Replacement
 Mode A - No Label Required

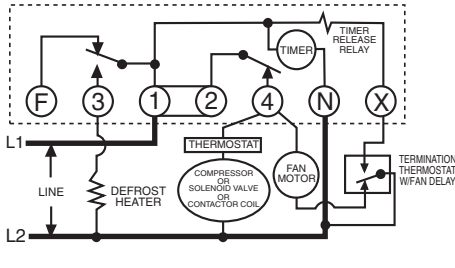


DEFAULT (Out of the Box)


DTMV40 Time/Temp.–Electric Defrost Wiring Diagram
6 120V Fan & Defrost Heater; 240V Compressor
 Mode A - No Label Required

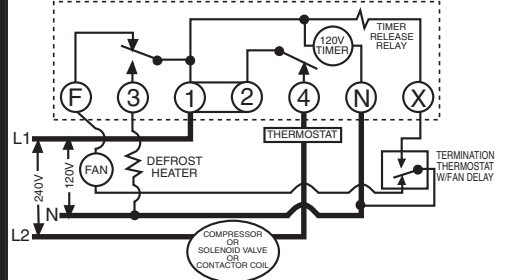

DTMV40 Time/Temp.–Electric Defrost Wiring Diagram
7 8141 Replacement
 Mode A with 8141 Label Applied

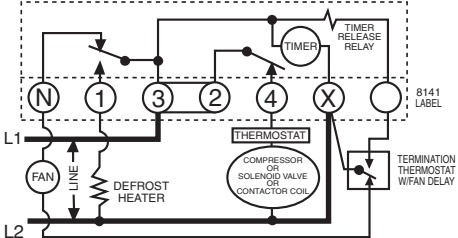


DTMV40 Time/Temp.–Hot Gas Defrost Wiring Diagram
8 8143 Replacement
 Mode B with 8143 Label Applied

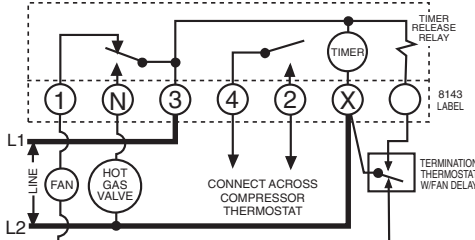


NOTE: Remove Bridge Between 3–4
 *See Note 1

DTMV40 Time/Temp.–Electric Defrost Wiring Diagram
9 8143 Replacement–Double Pole Switching
 Mode B with 8143 Label Applied

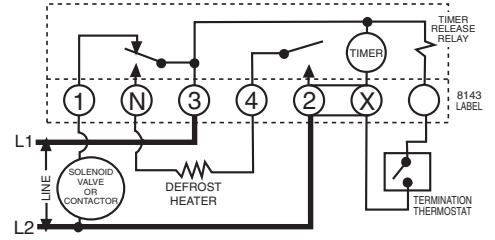


NOTE: Remove Bridge Between 3–4
 Connect Bridge Between 2–X

DTMV40 Time/Pressure–Electric Defrost Wiring Diagram
10 8245 Replacement
 Mode A with 8245 Label Applied

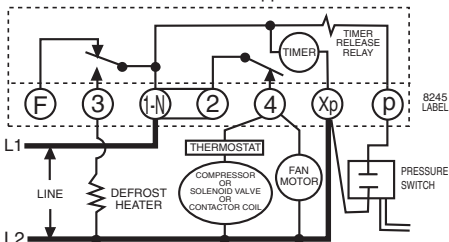


DTMV40 Time/Pressure–Compressor Shutdown
11 8243 Replacement
 Mode B with Trippers Reversed

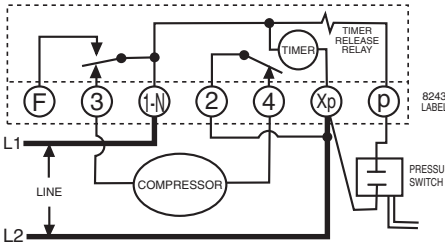





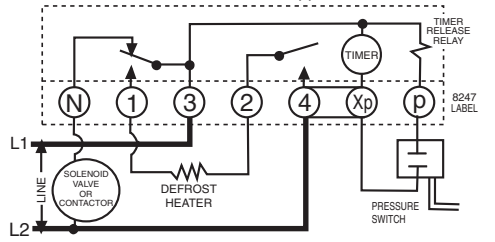





NOTE: Remove Bridge Between 1N–2
 *See Note 2


 
DTMV40 Time/Pressure–Electric Defrost Wiring Diagram
12 8247 Replacement–Double Pole Switching
 Mode B with 8247 Label Applied



NOTE: Remove Bridge Between 3–4
 Connect Bridge Between 4–Xp

WIRING LEGENDS

| Paragon Model | Precision Model | GRASSLIN Model | S1 Mode Selector | Terminal Ident. Label | Typical Wiring Diagram | Terminal Layout (see note below) |
|--|-----------------|------------------|------------------|-----------------------|---------------------------|--|
| TIME INITIATED, TIME TERMINATED | | | | | | |
| 8045 8046 | 6045 | DTMV40 DTMV40 | A A | None None | 1 |  |
| 8041 | 6041 | DTMV40 | A | 8041 | 2 |  |
| 8043 | 6043 | DTMV40 | B | 8043 | 3 |  |
| 8047 | 6047 | DTMV40 | B | 8047 | 4 |  |
| TIME INITIATED, REMOTE TEMPERATURE OR PRESSURE TERMINATED | | | | | | |
| 8145 | 6145 | DTMV40 | A | None | 5, 6 |  |
| 8141 | 6141 | DTMV40 | A | 8141 | 7 |  |
| 8143 | 6143 | DTMV40 | B | 8143 | 8, 9 See Note 1 |  |
| TIME INITIATED, PRESSURE TERMINATED (Separate Pressure Switch Required - see instructions) | | | | | | |
| 8245 | 6245 | DTMV40 | A | 8245 | 10 |  |
| 8243 | 6243 | DTMV40 | B | 8243 | 11 See Note 2 |  |
| 8247 | 6247 | DTMV40 | B | 8247 | 12 |  |

NOTE: In "Terminal Layout," the connecting lines between terminals indicate the correct positions of the bridges for each model. The heavy line  indicates the bridge must be installed as shown. The light line  indicates the bridge may be removed if different voltages are used at each switch.

APPLICATION

The DTMV40 Defrost Timer is equivalent in function, terminal identification, and wiring to the Paragon 8140 and Precision 6140 series Defrost Timers. The DTMV40 may also be used to replace Paragon 8040 and Precision 6040 series time terminated defrost timers. With the addition of a remote pressure switch, the DTMV40 can replace the Paragon 8240 series and Precision 6240 series pressure terminated defrost timers. Defrosts will be initiated by programming the timer, which will accept from 1 to over 24 defrost initiation settings per day at 15 minute intervals (8:00AM, 8:15AM, 8:30AM, etc.) *Defrost duration* is settable in 15 minute intervals from a minimum of 15 minutes up to several hours (15 minutes, 30 minutes, 45 minutes, 1 hour, 1 hour-15 minutes, etc.) The *defrost duration* determines the *termination time*.

In standard configuration, the contacts between terminals 1 and 3 are normally open and close during a defrost to energize defrost heaters; the contacts between terminals 2 and 4 are normally closed (when timer is energized) and open during a defrost to de-energize refrigeration and fans.

DTMV40 Time Initiated, Remote Temperature, Pressure or Time Terminated:

Used in electric or hot gas defrost applications where the defrost is terminated when the coil is frost free, as sensed by a temperature or pressure switch, even

though the defrost programmed *termination time* has not been reached. The *time termination* functions as a fail-safe and will terminate the defrost if the temperature or pressure switch fails to do so. The temperature or pressure switch on the refrigeration coil has contacts which close on a temperature or pressure rise above freezing, indicating that frost and ice have melted from the coil. Typically a wide differential SPDT temperature switch is used with its normally closed contacts wired to the fans thereby delaying the fans from coming on until the coil temperature has dropped back to below freezing. In most applications, the contacts at terminals 2 and 4 are normally closed (when timer is energized) and control the fans and refrigeration equipment or compressor. For hot gas defrost, or for double pole switching, contacts 2 and 4 may be configured as normally open by selecting mode "B." Refer to wiring diagrams 1 thru 12 for additional detail.

"F" Terminal:

The DTMV40 contains a normally closed contact between terminals 1 and F. This terminal may be used to switch the fans off during a defrost rather than terminals 2 and 4. For hot gas defrost applications, with the mode switch set to position "B", the fans may be connected to terminal "F."

Note: The DTMV40 is configured by default (out of the box) to replicate the 8145 wiring. For replacement of other models refer to page 3.

REPLACING EXISTING DEFROST TIMERS

IMPORTANT:

When replacing a Grasslin DT-040 model with a DTMV40, the power connections must be made to terminals **N** and **1** on the DTMV40. No connection must be made to the **X** terminal or damage to the unit will result. Disconnect the power wire from terminal **X** on the DT-040 and connect it to terminal **N** on the DTMV40. Disconnect the other power wire from terminal **N** on the DT-040 and connect it to terminal **1** on the DTMV40. All other wires should be connected to the DTMV40 the same as on the DT-040.

The DTMV40 will replace all models of Paragon 8040, 8140, 8240 Series or Precision 6040, 6140, 6240 Series.

TERMINAL IDENTIFICATION:

The standard DTMV40 terminal identification is identical to the Paragon 8145 with the addition of the "F" terminal. Terminal identification labels are provided for the other models to be placed over the printed numbers on the printed circuit board. From the table on page 4, select the proper label, apply to printed circuit board, and wire per the original wiring or the wiring diagrams indicated.

MODE SELECTION (Light Blue DIP Switch):


First determine what model is being replaced (Grasslin or Competitors). The mode selector DIP switch (located at lower right side of the board) determines the configuration of terminals 2&4. In position "**A**", the terminals are normally closed (only when the timer is energized), and will open during a defrost. In position "**B**", terminals 2&4 are normally open, and will close during a defrost. Select proper position from table below and wiring diagrams indicated. To select mode simply slide the switch as follows:

Mode **A** – position switch to left; Mode **B** – position switch to right

Note: When Mode "**B**" is selected the DTMV40 will operate as follows:

Refrigeration Mode – RED & GREEN LED's will turn OFF (1&3 and 2&4 break while 1&F make)

Defrost Mode – RED & GREEN LED's will turn ON (1&3 and 2&4 make while 1&F break)

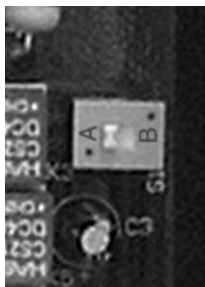

DTMV40 INSTALLATION INTO EXISTING ENCLOSURE

SETUP PROCEDURE

1. Disconnect power.
2. Disconnect wiring from existing defrost timer.
3. Remove Paragon mechanism from enclosure.
4. Remove Grasslin DTMV40 printed circuit board from its enclosure (gray plastic).
5. If necessary, adjust DIP switches and apply terminal identification label as indicated in the DTMV40 operating instructions.
6. Engage tabs on left side of printed circuit board into enclosure, and swing PCB into place.
7. Apply extra DTMV40 label to existing enclosure door.
8. Reconnect wires to DTMV40.
9. Attach gray faceplate over PCB and secure using existing enclosure locking latch as illustrated.
10. Reapply power.




DTMV40 Installation into Old Paragon Enclosure/Bracket

*****Note: Grasslin Recommends replacing Old Paragon Enclosure/Bracket entirely with the DTMV40 NEMA3R Enclosure or DTMV40-B Bracket Mount *****

SETUP PROCEDURE

1. Disconnect power (turn breaker OFF).
2. Disconnect wiring from existing Paragon timer.
3. Remove and save the 6-32 screw. Remove and discard two metal posts retaining Paragon mechanism.
4. Remove Paragon mechanism from enclosure.
5. Remove Grasslin DTMV40 mechanism from it's enclosure (if applicable) and with pliers break off the 3 tabs on left side of printed circuit board.
6. Remove contents of plastic hardware bag.
7. Refer to DTMV40 operating instructions for procedures on setting voltage and mode DIP switches.
8. Refer to installation diagram below. **CAUTION: If the DTMV40 mechanism is not assembled to the old Paragon enclosure/bracket exactly as shown below, a short circuit may occur which will destroy the DTMV40 defrost timer.**
9. Reconnect wires, tighten terminal screws securely. Reapply power (turn breaker ON).
10. Follow the programming/setup procedure (refer to DTMV40 operating instructions).

Old Paragon Enclosure

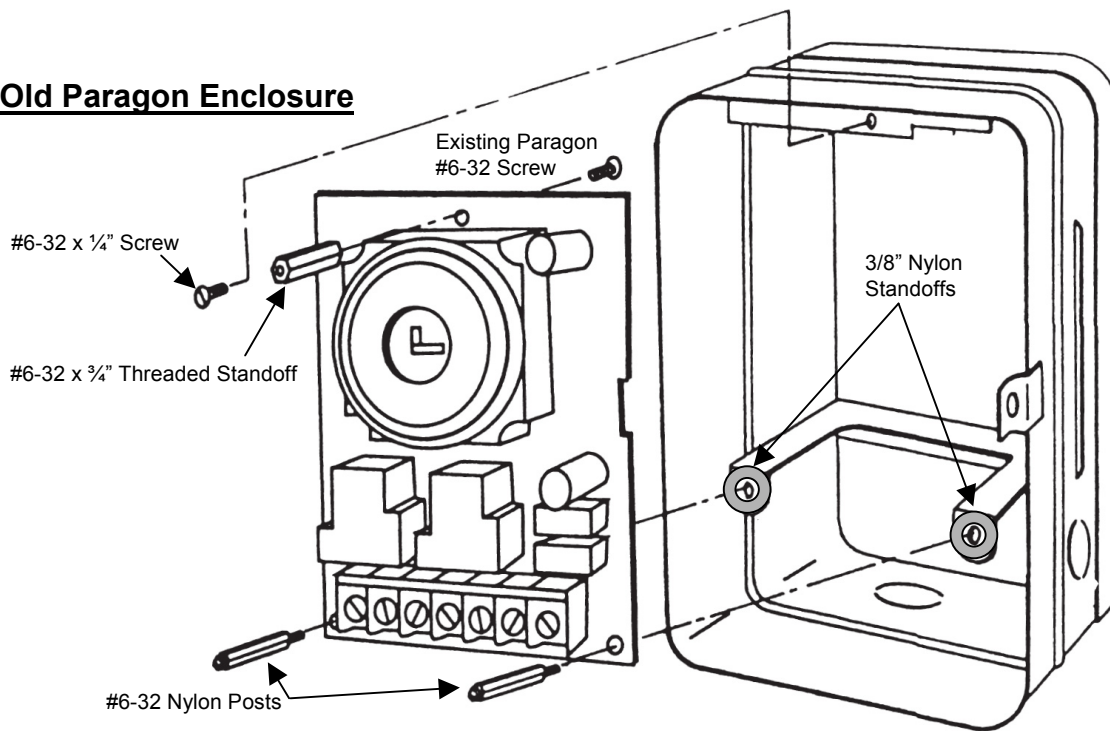

Paragon Bracket

