

General guideline for setting recirculation system timer:

Choose between **timer-controlled** and **thermostat-controlled** using slide switch located at or under timer dial.

Choose Timer if you want timer-controlled operation.

Choose ON if you want thermostat-controlled operation.

Choose OFF to turn recirculation system off.

Dial has small pins located around face of dial.

Move pins inward or outward using finger or pencil or fingernail file.

Dial rotates like a clock and the pins move small switch that turns pump on-off.

If dial is not rotating, then check electric circuit. Clock motors can burn out, weaken and slow down over time.

General rule with timer pins, when they are moved outward, the pump is ON. Pins inward, the pump is OFF.

If you want timer ON for 1 hour each day, then move 4 consecutive pins outward, and leave rest inward.

If you want timer ON for 4 hours, then move 16 consecutive pins outward.

If this is incorrect for your model number, then move pins inward instead of outward.

To check settings, manually rotate timer dial clockwise and listen for pump. Manually rotating timer dial will let you investigate how to set pins, and how to set slide-switch.

Since dial is a clock, current time must be set.

Manually rotate dial until current time lines up with arrowhead located on inner dial.

