



# INTERMATIC TIME-ALL® HEAVY DUTY TIMER

PROGRAM REPEATS EVERY 24 HOURS  
TO SET TIMER: (SEE ILLUSTRATION)

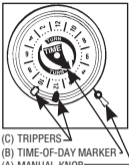

(C) TRIPPERS  
(B) TIME-OF-DAY MARKER  
(A) MANUAL KNOB

1. Insert **ON (RED)** and **OFF (BLACK)** trippers(C) into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the correct time-of-day is adjacent to the time-of-day marker (B).
3. Turn lamp or appliance **ON** and plug into timer.
4. Plug timer into electrical outlet.

## FOR EARLY ON OR OFF OPERATION,

Turn manual knob (A) counter clockwise  to desired **ON** or **OFF** position. Timer will follow next scheduled automatic operation.

*IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)*

### **WARNING** Risk of Fire

WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER.

## MODEL: HB113

CONTACT: 1 HP (12 FLA, 72 LRA), (12A. AIR CONDITIONER)  
20 A RESISTIVE, 8 A INDUCTIVE 1250 W TUNGSTEN TV-5,  
576 VA PILOT DUTY, 125 V AC, 60 Hz.  
CLOCK MOTOR: 125 VOLT 60 Hz.  
MADE IN MEXICO



**INTERMATIC INCORPORATED**  
SPRING GROVE, ILLINOIS 60081-9698