


154-01255

INTERMATIC TIME-ALL® HEAVY DUTY TIMER


PROGRAM REPEATS EVERY 24 HOURS
TO SET TIMER: (SEE ILLUSTRATION)



(C) TRIPPERS
(B) TIME-OF-DAY MARKER
(A) MANUAL KNOB

1. Insert **ON (RED)** and **OFF (BLACK)** trippers(C) into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the correct time-of-day is adjacent to the time-of-day marker (B).
3. Turn lamp or appliance **ON** and plug into timer.
4. Plug timer into electrical outlet.

FOR *EARLY ON OR OFF OPERATION*,

Turn manual knob (A) counter clockwise  to desired **ON** or **OFF** position. Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

! WARNING Risk of Fire
WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER.

MODEL: HB114

CONTACT: 2 HP (8 FLA, 48 LRA), (8A. AIRCONDITIONER)
20 A RESISTIVE, 8 A INDUCTIVE,
768 VA PILOT DUTY, 240 V AC, 60 Hz.
CLOCK MOTOR: 240 VOLT 60 Hz.
MADE IN MEXICO



INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698