

LISTED
885L

Model R8815P101C

PROGRAM TIME SWITCH WITH 14-DAY "SKIPPER®" MECHANISM

WITH RAIN SENSOR CONNECTIONS.

FOR UP TO 60 OPERATIONS PER DAY


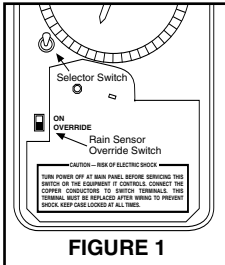
**RELAY CONTACTS: DOUBLE POLE SINGLE THROW
30 AMP., 1 1/2 H.P. 120 VOLTS A.C.
CLOCK MOTOR: 125 VOLTS - 60 HZ.**

FIGURE 1

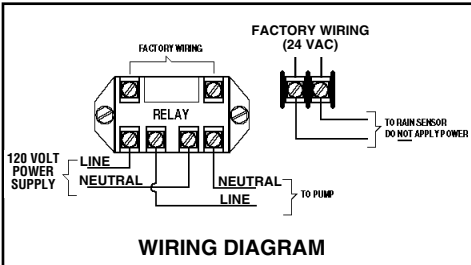

WIRING DIAGRAM

PROGRAMMING INSTRUCTIONS:

- TO SET FIRST ZONE:** For watering, push gold pin into slot on yellow dial at desired ON time. For each 12 minutes of additional watering add one pin **WITHOUT** skipping a slot.
- TO CHANGE ZONES:** Leave one blank slot on yellow dial after ON line (gold pin), and valve will automatically advance to next zone.
- TO SET ADDITIONAL ZONES:** Repeat steps 1 and 2. **REMEMBER** to leave blank space between zones
- TO SET TIME OF DAY:** Turn yellow dial **CLOCKWISE**, until correct line is at end of silver time pointer. Do **NOT** turn silver pointer.
- TO SKIP DAYS:** Turn black skipper wheel **COUNTER-CLOCKWISE** until today's day is in front of "14" arrow. Press pins **DOWN** on days of NO watering. The skipper wheel must have all pins **UP** for daily watering.
- PUT SELECTOR SWITCH IN AUTO:** This switch can be used to turn the system ON or OFF for manual operation without affecting the set program.
- PUT RAIN SENSOR OVERRIDE SWITCH IN "ON" POSITION:** The **OVERRIDE** position can be used to override the rain sensor for testing purposes and must be used if the time switch is being used without a rain sensor.

IMPORTANT NOTICE: Use the one silver pin that is located at Midnight on the yellow dial, it advances the skipper wheel automatically. Do **NOT** use multiple silver pins.

Follow The National Electrical Code and local code requirements when installing this time switch.

CAUTION: Always disconnect power at main panel before servicing this Switch or the equipment it controls.

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698

158T8602

MADE AND PRINTED IN U.S.A.