

- 1-Button Remote
- 2-Button Remote
- 3-Button Remote

- Model LK-318-1
- Model LK-318-2
- Model LK-318-3


1. INTRODUCTION

Thank you for your purchase of a SkylinkHome™ Remote, Model LK-318-1/ LK-318-2 / LK-318-3. This remote which is also called transmitter in this document allows you to wirelessly operate SkylinkHome™ receiver modules.

All wireless signal communications within the SkylinkHome™ system are based on rolling code technology to ensure highest security is used.

The following items are included in this package:


- One of LK Series Remotes
- Lithium Battery CR-2032 (Installed)
- User's Instructions

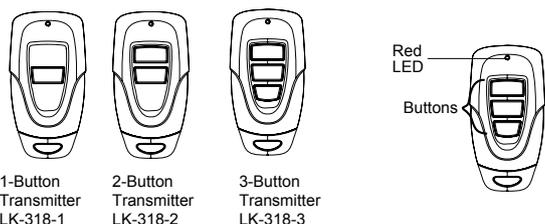

2. POWER UP

To power the transmitter, simply remove the battery isolator from the transmitter, red LED will flash once. Press the button on the transmitter, the red LED should flash. The transmitter is now powered properly. If the red LED does not flash when button is pressed, refer to Section 6 "Battery" of this manual.

- 1) Remove isolator,
- 2) LED on for 1 second

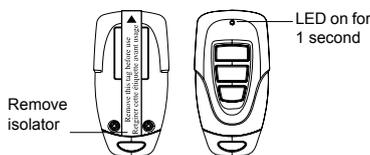

3. PROGRAMMING TRANSMITTERS TO RECEIVER MODULE

In order to operate the receiver module remotely with a transmitter, it must be programmed to the receiver module.

To program a remote to the receiver module, a "Learn" code must be transmitted, follow the instructions below to transmit the "Learn" code to the receiver.

1. Put the receiver module that you plan to program into programming mode. Refer to the User's Instructions of that receiver module.
2. Press 1 and 2 simultaneously and hold for 2 seconds until the LED changes from on to flashing quickly. Release the buttons. The red LED on the transmitter will be on for 15 seconds.
3. Press the button on the remote that you plan to use when the LED is steadily on to transmit the "Learn" code.
4. Once the remote is programmed, the receiver modules will quit from programming mode and the programmed transmitter is ready to be used now.

Learn Code

Follow steps 2 and 3 above to transmit the "Learn" code when programming the remote to receiver modules.

You may follow the same instructions to program different buttons on the transmitter to different receiver modules.

4. ON / OFF OPERATION

Pressing the programmed button on the transmitter once will toggle the status of the load that is connected to the receiver module, i.e. if the light is off, pressing the button turns on the light, and vice versa.

When the programmed button is pressed, the red LED flashes briefly indicating signal is transmitting.

5. ADVANCED FEATURE - PASSWORD PROTECTION


Password protection (Only available for LK-318-3 (Not available for LK-318-1 or LK-318-2))

The LK-318-3 can be password protected. If you enable the password protection, you can only operate LK-318-3 after you input the correct password.

Password can be 2-8 digits long, which is a combination of 1, 2 and 3. For example, password can be 1, 2, 1, 2. To input this password, you have to press button [1], then [2], then [1], then [2].

Note:

[1] = Button 1 [2] = Button 2 [3] = Button 3

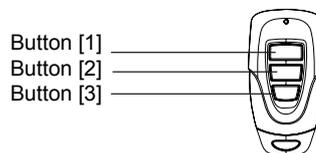

Note:

The time-out period is 1 second during above password input.

The factory default password is 2, 2, 2, and this password function is disabled out of factory.

Change password

1. Press 1 and 3 simultaneously and hold for more than 10 seconds until the LED changes from flashing quickly to flashing slowly.
2. Input old password.
3. Press 1 and 3 once simultaneously to confirm. If the password is wrong, the LED will flash 3 times and you have to start it over from step 1.
4. Input new password.
5. Press 1 and 3 once simultaneously to confirm.
6. Input new password again.
7. Press 1 and 3 once simultaneously to RE-confirm. If the password is different from the one of step 4, the LED will flash 3 times and you have to start over from step 1. Otherwise, the password has been changed to the new one and the password protection is enabled.

Disable password

1. Press 1 and 3 simultaneously and hold for more than 5 seconds until the LED flashes quickly but not until the LED flashes slowly.
2. Input old password.
3. Press 1 and 3 once simultaneously to confirm. If the password is the password protection will be disabled.

Enable password

1. Press 1 and 3 simultaneously and hold for more than 2 seconds until the LED flashes quickly but not until the LED flashes slowly.
2. Input old password.
3. Press 1 and 3 once simultaneously to confirm. If the password is correct, the password protection will be enabled.

You can toggle the two states - password protection enabled or disabled.

Note:

The time-out period is 15 seconds during any of the above setting operations. After 10 seconds, the LED will flash 3 times and the remote will exit from setting.

5. ADVANCED FEATURE - PASSWORD PROTECTION (CONT)

If you forget your password and want to reset LK-318-3, follow the steps below:

1. Press 1 and 2 simultaneously and hold for more than 15 seconds until the LED flashes.
2. After you release 1 and 2, the LED will be turned off and LK-318-3 will be reset. The password will be reset to factory default.


After the reset, password protection is removed but the remote can not control any receiver until you reprogram it to receivers you want to control.

6. BATTERY

When the operating range is reduced, or when the red LED does not flash during operation, it is time to replace the battery.

The transmitter is powered by a lithium battery CR-2032. Follow the instructions below to replace the battery to the transmitter.

Lithium battery CR-2032 included. (Positive side up)

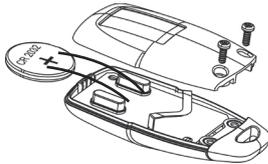

1. Undo the two screws on the back of the remote. The bottom case will then come off.
2. Take out the old battery.
3. Place the new battery in position.
4. Close the cover and reinsert two screws.

Note: Dispose of old battery promptly and properly.

7.FCC

The device is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions :

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

8. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

9.CUSTOMER SERVICE

If you would like to

- find out the up-to-date specifications
- know more about features and applications
- download documents, i.e. user's instructions
- order Skylink products

or if you have difficulty getting products to work, please:

1. visit our FAQ section at www.skylinkhome.com, or
2. email us at support@skylinkhome.com, or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST. Fax (800) 286-1320

10. ACCESSORIES

The SkylinkHome™ System consists of many other devices such as SkylinkHome™ Remotes, Motion Sensor, ON/OFF Wall Switch, Wall Dimmer, Plug-In Dimmer with or without Repeater, Plug-In ON/OFF Control (Outdoor/Indoor), Screw-In Dimmer, ON/OFF/Dimming Control, ON/OFF Control, Smart Button™ Garage Door Control, etc. Please visit Skylink website at www.skylinkhome.com for more information.



CUSTOMER SERVICE

17 Sheard avenue, Brampton, Ontario, Canada L6Y 1J3
Email : support@skylinkhome.com
<http://www.skylinkhome.com>
P/N. 101Y058
Patent Pending
© 2012 SKYLINK GROUPE