
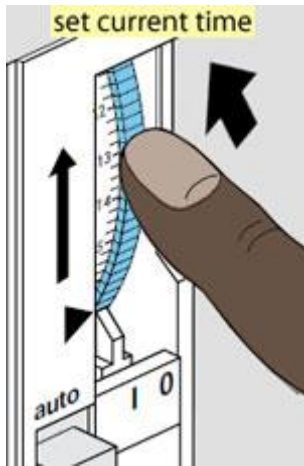


Legrand 03740 vertical analog timer instruction manual

230V 50-60Hz Rated max 16 amps

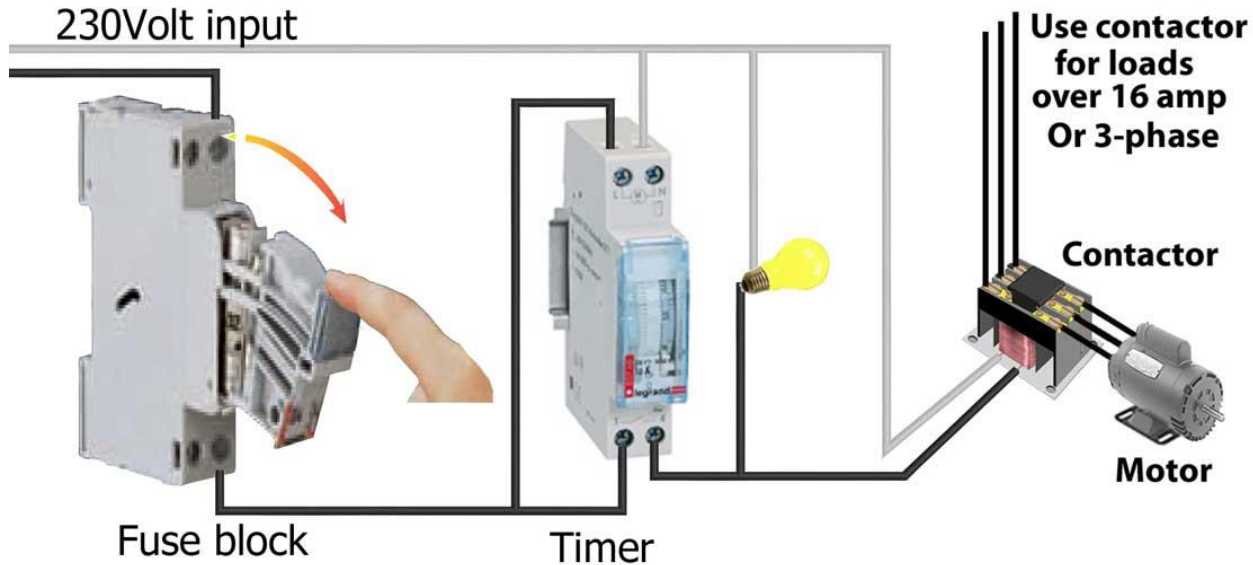

Protect timer with fuse.
Wire timer as shown above.
Use 2-pole or 3-pole contactor for loads over 16 amp, and for 3-phase

Set current time by rotating dial
Move dial until current time aligns with triangle mark



Manually rotate timer dial to watch how load turns ON-OFF
Move override lever to each position and rotate dial again.
This will show how to set ON-OFF times

More DIN rail timers

<http://waterheatertimer.org/Hagar-timers-and-manuals.html>

<http://waterheatertimer.org/Intermatic-timers-and-manuals.html#talento-800>

<http://waterheatertimer.org/Tork-Digital-timers-and-manuals.html#DIN>

Installation on DIN rail

