

OUTDOOR **DIGITAL**  
**TIMER**

WITH **PHOTOELECTRIC EYE**



**Woods**  
Moonray power pack instructions



**Instructions**

Moonray power pack instructions

▲ **Digital Timer Controls**

▼ Use the UP ▲ and DOWN ▼ control buttons to select from the following settings:

- **Power OFF:** This switches the complete system off.
- ☐ **Constant power ON:** This switches the system on 24 hours a day.
- ☒ **AUTO:** This switches the system on at dusk and off at dawn, automatically.
- ☒ **AUTO TIMER:** This switches the system on at dusk and off after the selected number of hours.

DO NOT SUBMERGE IN WATER.

Use a 3 conductor, GFCI-protected outlet.

This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

DO NOT EXCEED RATED CAPACITY:



Coleman Cable, Inc.  
Waukegan, IL 60085  
© 2008 Coleman Cable, Inc.  
Printed in China