

REVISIONS			
REV.	DESCRIPTION	DATE	APPRVD.

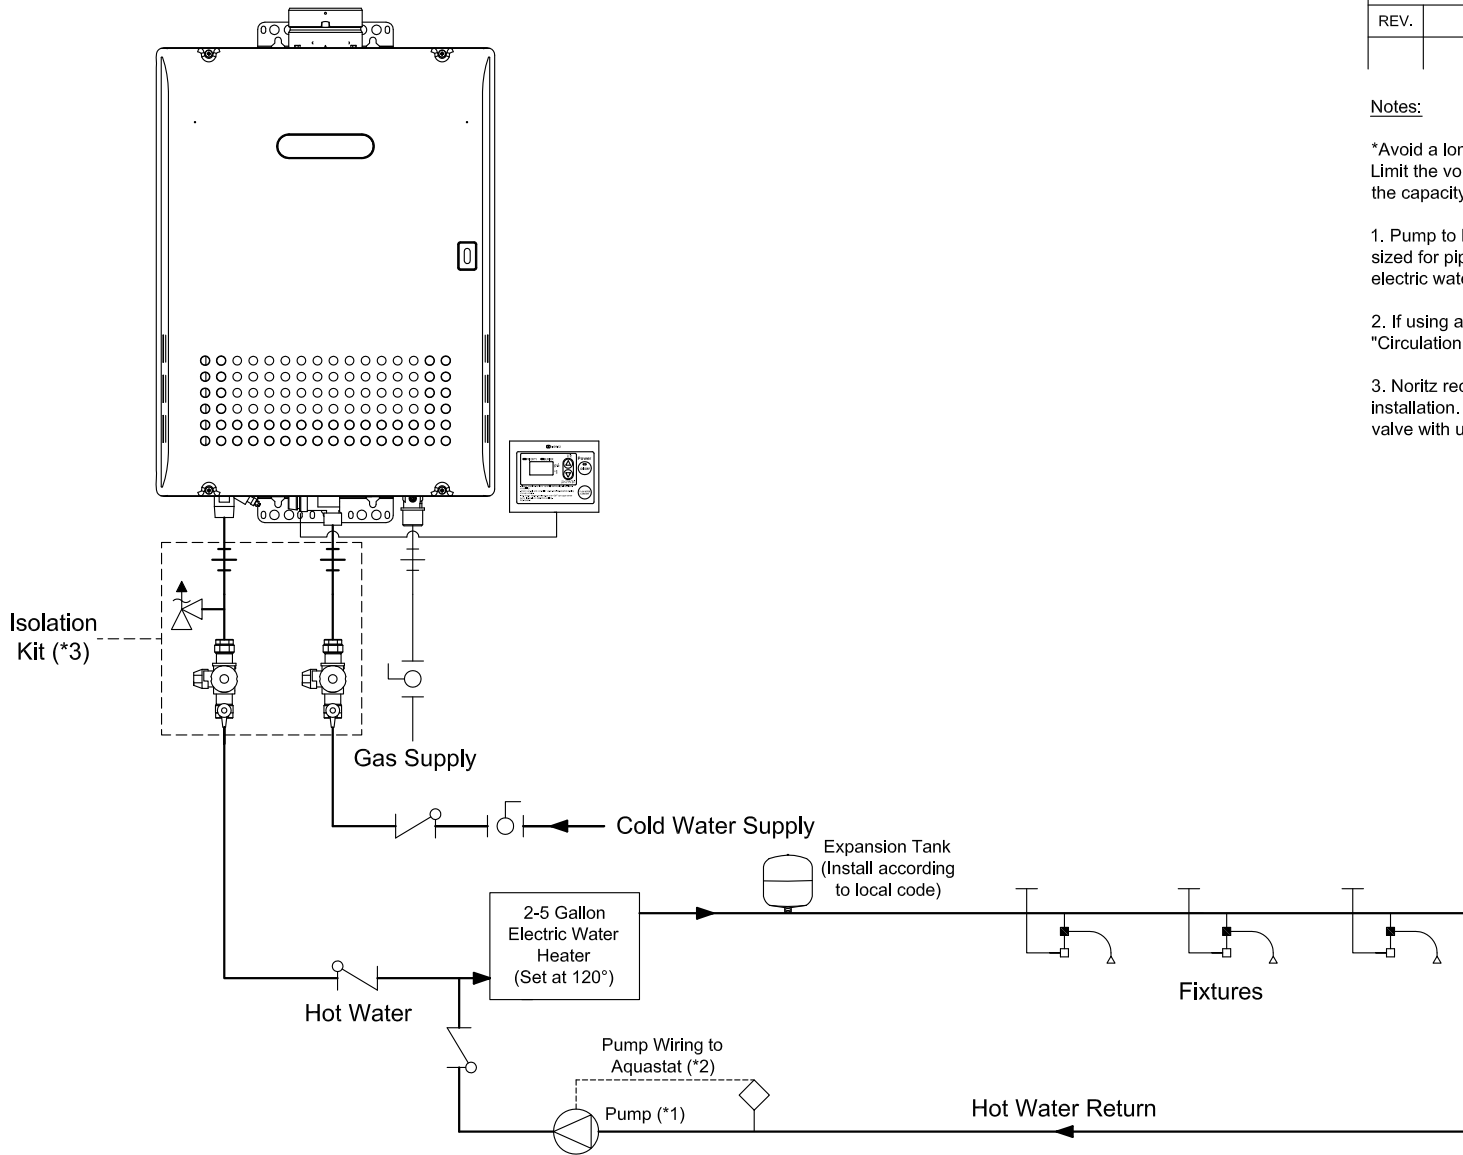
**Notes:**

\*Avoid a long pipe run from Norritz heater to electric storage tank. Limit the volume of the recirculation loop piping from exceeding the capacity of the electric storage tank.

1. Pump to be controlled by aquastat or timer. Pump should be sized for piping losses through system and loss through the electric water heater.

2. If using aquastat, wire aquastat to pump according to "Circulation Pump to Aquastat Wire Diagram (PAWD.pdf)."




3. Norritz recommends the use of Isolation Kit (IK-WV-5) with installation. These kits include an integrated shut-off and service valve with unions and a pressure relief valve.



 

 

 



11160 Grace Avenue  
Fountain Valley, California 92708  
866-7NORITZ (866-766-7489)  
www.noritz.com

<b>MODEL:</b>	N-0931M
<b>APPLICATION:</b>	Domestic Hot Water Recirculation Electric Storage Tank
<b>DRAWING NUMBER:</b>	(2b)N931M
<b>DRAWING DATE:</b>	September 22, 2008

**Norritz Accessories**

-  RC-7649M (Remote Controller)
-  RC-CORD10 (10' Remote Controller Cord, optional in 26')
-  VC-4-1 (Outdoor Vent Cap, place on top of unit)

*Note: This diagram is for reference only. Installation must comply with State and Local Code, all gas and water pipe must be sized correctly to specific length, according to accepted engineering methods or the UPC Code for Norritz Water Heaters to operate correctly.*

 Shut-off Ball Valve	 Aquastat (Honeywell Model #L6006A or L6006C)
 Check Valve	 Pump
 Union	 Mixing Valve
 Pressure Relief Valve (Watts 174A, Zurn P3000BR, Cash Acme F-82)	 Thermal Expansion Tank