

- ▲ or ▼ Scroll through program parameters
- ⌚ display current time and day
- SET Enter program selection
- TIME Program current time and day
- PROG Set watering programs (1-16)
- PROG and OFF Erase all program data
- ON and OFF Operate timer manually
- 🔋 Low battery indicator

Low Battery Indicator

The Raindrip R673C Digital Timer is powered by 2 AAA batteries that are installed in the battery compartment located just below the control buttons on the face of the timer. Squeeze the two tabs, on the front of the battery case, toward each other and pull the battery case out of the body. The + tip of the battery must be pointed away from the spring. When the low battery indicator is displayed the timer will no longer turn on.

Set Current Time and Day

- 1 Press **TIME** and the hour digit will begin to flash.
- 2 Use the ▲ or ▼ buttons set the current hour (please take note that the timer uses a 24 hour clock). For example, 1:00PM will be 13:00 on the timer and 6:00PM will be 18:00. After selecting the current hour press **SET** to enter the hour. The minute's digits will begin to flash.
- 3 Using the ▲ or ▼ buttons set the current minute, then press **SET** to enter the current minutes, and **Su** will begin to flash.
- 4 Use the ▲ or ▼ buttons to select the current day of the week than press to **SET** enter the day of the week.



Manual Operation

The R673 Digital Timer can be operated manually at any time. To enter manual operation press the button **ON** button and the run time hour will begin flashing. Use the ▲ or ▼ buttons to set the number of hours. Press **SET** and the runtime minutes will begin to flash. Use the ▲ or ▼ buttons to select the desired number of minutes (the timer has a default of 15 minutes pre-programmed). After the run time minutes is selected press **SET** and the timer will open allowing water to flow. The timer can be turned off at any time by pressing the **OFF** button.

Programming Watering schedule

The Raindrip R673 Digital Water Timer is capable of 16 separate watering schedules.

- 1 Press **PROG** to enter programming mode. The display will appear with a 1 on the left side of the display. Use the ▲ or ▼ buttons to select any of the 16 watering programs. Press the **SET** button to set the program desired (1-16).
- 2 The start time hour will flash. Use the ▲ or ▼ buttons to select the start hour then press **SET**.

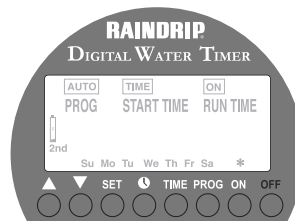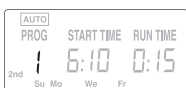

- ▲ or ▼ Scroll through program parameters
- ⌚ display current time and day
- SET Enter program selection
- TIME Program current time and day
- PROG Set watering programs (1-16)
- PROG and OFF Erase all program data
- ON and OFF Operate timer manually
- 🔋 Low battery indicator

Low Battery Indicator

The Raindrip R673C Digital Timer is powered by 2 AAA batteries that are installed in the battery compartment located just below the control buttons on the face of the timer. Squeeze the two tabs, on the front of the battery case, toward each other and pull the battery case out of the body. The + tip of the battery must be pointed away from the spring. When the low battery indicator is displayed the timer will no longer turn on.

Set Current Time and Day

- 1 Press **TIME** and the hour digit will begin to flash.
- 2 Use the ▲ or ▼ buttons set the current hour (please take note that the timer uses a 24 hour clock). For example, 1:00PM will be 13:00 on the timer and 6:00PM will be 18:00. After selecting the current hour press **SET** to enter the hour. The minute's digits will begin to flash.
- 3 Using the ▲ or ▼ buttons set the current minute, then press **SET** to enter the current minutes, and **Su** will begin to flash.
- 4 Use the ▲ or ▼ buttons to select the current day of the week than press to **SET** enter the day of the week.

Manual Operation

The R673 Digital Timer can be operated manually at any time. To enter manual operation press the button **ON** button and the run time hour will begin flashing. Use the ▲ or ▼ buttons to set the number of hours. Press **SET** and the runtime minutes will begin to flash. Use the ▲ or ▼ buttons to select the desired number of minutes (the timer has a default of 15 minutes pre-programmed). After the run time minutes is selected press **SET** and the timer will open allowing water to flow. The timer can be turned off at any time by pressing the **OFF** button.

Programming Watering schedule

The Raindrip R673 Digital Water Timer is capable of 16 separate watering schedules.

- 1 Press **PROG** to enter programming mode. The display will appear with a 1 on the left side of the display. Use the ▲ or ▼ buttons to select any of the 16 watering programs. Press the **SET** button to set the program desired (1-16).
- 2 The start time hour will flash. Use the ▲ or ▼ buttons to select the start hour then press **SET**.



3 The start time minutes will flash. Use the ▲ or ▼ buttons to select the start time minutes then press **SET**.



4 The run time hours will flash. Use the ▲ or ▼ buttons to select the run time hours (from 0 to 9 hours) then press **SET**.



5 The run time minutes will flash. Use the ▲ or ▼ buttons to select the run time minutes then press **SET**.



6 The display **2nd** will be flashing on the left side of the display. At this point the user will need to decide to select every other day every third day or select watering days at will.



If every second day is desired proceed to step **7**. For every third day watering proceed to step **8**. To select water days at will proceed to step **9** of these instructions.

7 While **2nd** is flashing on the left side of the display press **SET** and **Su Tu We Fr** will appear at the bottom of the display with a ★ flashing at right bottom of e display. Press **SET**. The next watering program will appear in numeric order. If another watering program is desired go back to step **1** and repeat the process. After all programming is complete press the button ⏸. The timer will display the current time and day and the it is ready to operate.



8 If the every third day operation is desired, press the ▼ while **2nd** is flashing. **3rd** will start flashing and **Tu We Sa** will appear with a ★ flashing at the right bottom of the display. Press **SET** and the next program in the sequence will appear. If another watering program needs to be added, return to step **1** and repeat the program sequence. After the programming is complete, press ⏸. The timer will display the current time and date and it is ready for operation.



9 To select watering days at will press the ▼ button twice while **2nd** is flashing on the left side of the display. **Su** will begin to flash. To select watering days press **SET** while the desired day is flashing. To skip days press ▼ while the day is flashing. After all days are selected the ★ will be flashing. Press **SET** and the next program in the sequence will appear. If another watering program is necessary, return to step **1** and repeat the sequence. If all programming is complete press ⏸. The timer will display the current time and day and it is ready for use.



337 West Bedford, Fresno CA 93711
 Technical Service: 888-825-4716
 www.raindrip.com

3 The start time minutes will flash. Use the ▲ or ▼ buttons to select the start time minutes then press **SET**.



4 The run time hours will flash. Use the ▲ or ▼ buttons to select the run time hours (from 0 to 9 hours) then press **SET**.



5 The run time minutes will flash. Use the ▲ or ▼ buttons to select the run time minutes then press **SET**.



6 The display **2nd** will be flashing on the left side of the display. At this point the user will need to decide to select every other day every third day or select watering days at will.



If every second day is desired proceed to step **7**. For every third day watering proceed to step **8**. To select water days at will proceed to step **9** of these instructions.

7 While **2nd** is flashing on the left side of the display press **SET** and **Su Tu We Fr** will appear at the bottom of the display with a ★ flashing at right bottom of e display. Press **SET**. The next watering program will appear in numeric order. If another watering program is desired go back to step **1** and repeat the process. After all programming is complete press the button ⏸. The timer will display the current time and day and the it is ready to operate.



8 If the every third day operation is desired, press the ▼ while **2nd** is flashing. **3rd** will start flashing and **Tu We Sa** will appear with a ★ flashing at the right bottom of the display. Press **SET** and the next program in the sequence will appear. If another watering program needs to be added, return to step **1** and repeat the program sequence. After the programming is complete, press ⏸. The timer will display the current time and date and it is ready for operation.



9 To select watering days at will press the ▼ button twice while **2nd** is flashing on the left side of the display. **Su** will begin to flash. To select watering days press **SET** while the desired day is flashing. To skip days press ▼ while the day is flashing. After all days are selected the ★ will be flashing. Press **SET** and the next program in the sequence will appear. If another watering program is necessary, return to step **1** and repeat the sequence. If all programming is complete press ⏸. The timer will display the current time and day and it is ready for use.



337 West Bedford, Fresno CA 93711
 Technical Service: 888-825-4716
 www.raindrip.com