



INSTALLATION INSTRUCTIONS

1, 2, or 3 Button Remote

Model: TC-318-1, TC-318-2 or TC-318-3



Congratulations on your purchase of the SkylinkHome™ 1, 2 or 3 Button Remote, model TC-318-1, TC-318-2 or TC-318-3. Wirelessly operate your lights and devices when you pair it with SkylinkHome™ receivers.


Safety Information

WARNING: Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

The device is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference that may cause undesired operation.

Section 1 - Set Up

1. Remove the battery isolator from the back of the remote. The red LED will flash once.
2. Press the button on the transmitter. The red LED should flash.
3. If the LED does not flash when the button is pressed. Refer to section 9 for instructions on battery replacement.

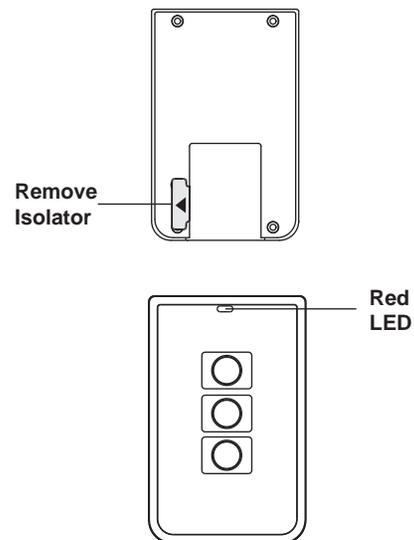


Section 2 - Programming


NOTE: Refer to section 7 to learn how to set your receiver in Programming Mode. You may follow the same instructions to program different buttons to different receivers.

NOTE: Use a sharp non-conductive object, like a pen or pencil, to press the learn button.

1. Put the receiver in programming mode. Refer to section 7 for instructions.
2. Press the Learn Button on the back of the remote. The red LED will be on for 15 seconds.

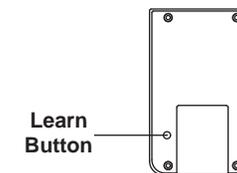

3. Press the button on the remote that you wish to program to the receiver within 15 seconds.

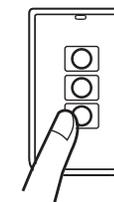

4. The receiver will quit from the programming mode if the device has been successfully programmed.

Warranty

ONE YEAR WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support: 9:00am - 5:00pm EST, Monday-Friday.

1-800-304-1187

Or e-mail us at support@skylinkhome.com

www.skylinkhome.com

Package Contents


This package comes with one of the following remotes:
 1 Button Remote, 2 Button Remote, 3 Button Remote.



*Lithium Battery CR2032 already included.

Section 3 - Operation

1. Press the programmed button on the remote once.
2. The red LED will flash briefly indicating a signal has been transmitted to the programmed receiver.
3. The device should turn on or off.

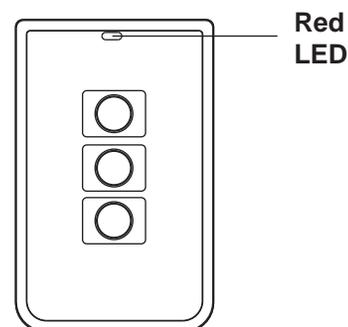

Section 4 - Dimming

NOTE: Light bulb connected to the receiver must be dimmable and compatible with the receiver.

NOTE: To dim and brighten the light, the dimming mode has to be enabled. On/Off Mode turns the light on/off and Dimming Mode turns the light on/off or dims/brightens.

NOTE: If the light is not dimming, press and hold the button on the transmitter for 10 seconds until the light flashes twice to enable the Dimming Mode. To go back to On/Off Mode, repeat the step until the light flashes once.

1. Turn on the light.
2. Press and hold the programmed button on the remote until the desired dimming is reached.
3. Release the button.
4. Repeat step 2 to brighten the lights and then release the button again.


NOTE: If the red LED is solid on when you press the button, replace the Battery. Refer to section 9 for instructions on battery replacement.

Section 5 - Erasing




NOTE: Refer to section 8 for instructions on how to erase your receiver. Some receivers don't require the steps below.

1. Press the Learn button on the back of the remote.

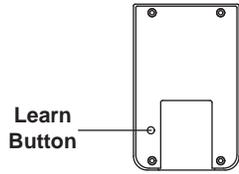

2. Press and hold the button that you wish to erase.
3. The red LED will be flashing. Do not release this button until step 5.

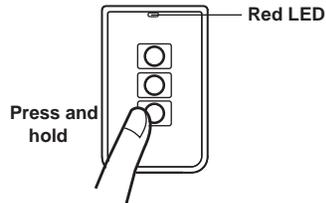

4. Put the receiver into programming mode. Refer to section 8 for instructions on how to do this.
5. Release the button on the remote.
6. All the devices programmed in that receiver have been successfully erased.

Section 6 - Reset the Remote Control




NOTE: After resetting, the unique remote ID will be changed.




NOTE: You must re-program the remote to all the receivers you programmed to before.

1. Slide out the battery door.
2. Press and hold the Learn button on the back of the remote and slide the battery door back into place.

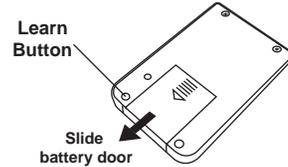

3. When the red LED flashes quickly, release the Learn button.
4. The red LED will then flash 3 times slowly.

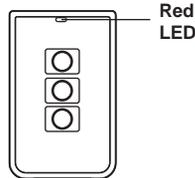

5. The remote has now been reset.

Section 7 - Set the Receiver in Programming Mode

Receiver

Plug-in Dimmer/with Repeater (PL/PR-318)

1. Turn off the device/light.
2. Press and hold the Learn button for 3 seconds. The red LED will flash quickly.
3. Release the Learn button.

Plug-in On/Off (Indoor/Outdoor) (PA-318)

1. Turn off the device/light.
2. Press and hold the Learn button for 3 seconds. The red LED will flash quickly.
3. Release the Learn button.

Screw-in Dimmer (LS-318)

1. Power off the LS-318.
2. On the Screw-in Dimmer, slide into the desired position (e.g On/Off).
3. Power on the LS-318.
4. The red LED will blink according to the mode you chose.

Mini Screw-in Dimmer (LX-318)

1. Power off the Mini Screw-in Dimmer by turning it off on your wall switch or at the circuit breaker.
2. Power on the Mini Screw-in Dimmer. It will beep.
3. It is now in programming mode and will stay in this mode for 15 seconds.

Receiver

Wall Dimmer (WR-001)

1. Touch the metal touch plate on the Wall Dimmer to turn the lights on. The two blue LEDs should go off.
2. Press and hold the learn button for 3 seconds until the upper blue LED flashes quickly and then release the learn button.

Wall Switch (WE-001)

1. Press the Switch Button on the Wall Switch to turn the lights on. The two blue LEDs should go off.
2. Press and hold the learn button for 3 seconds until the upper blue LED flashes quickly and then release the learn button.

On/Off/Dimming Control (MD/MR-318)

1. Power off the On/Off/Dimming Control by turning it off on your wall switch or at the circuit breaker.
2. Power on the On/Off/Dimming Control. It will beep.
3. It is now in programming mode and will stay in this mode for 15 seconds.



NOTE: If the receiver you wish to program isn't listed here, please refer to the receiver's user manual for instructions.

Section 8 - Set the Receiver in Erase Mode



NOTE: Self-erasing receivers will erase all devices that are programmed to it. You must then re-program the devices you want to keep.



NOTE: Self-erasing receivers will erase all devices that are programmed to it. You must then re-program the devices you want to keep.



NOTE: Erase by remote receivers will erase all devices that are programmed to it. You must then re-program the devices you want to keep.

Self-Erasing - the Remote is not needed

Receiver

Plug-in Dimmer/with Repeater (PL/PR-318)

1. Unplug the PL/PR-318 from the AC electrical outlet.
2. Press and hold the Learn button while plugging it back in.
3. The red LED will be on first, then flash rapidly for 1 second and then on and off.
4. Release the Learn button.

Plug-in On/Off (Indoor/Outdoor) (PA-318)

1. Unplug the PA-318 receiver from the AC electrical outlet.
2. Press and hold the Learn button while plugging it back in.
3. The red LED will be on first, then flash rapidly for 1 second and then on and off.
4. Release the Learn button.

Receiver

Screw-in Dimmer (LS-318)

1. Power off the LS-318.
2. On the Screw-in Dimmer, slide into the Timer position.
3. Press and hold the Learn button.
4. While holding the Learn button, power on the LS-318. The red LED will flash quickly.
5. Release the Learn button.

Wall Dimmer (WR-001)

1. Power off the Wall Dimmer by sliding the air gap switch into the off position.
2. Press and hold the learn button and slide the air gap switch back into the on position.
3. The blue LEDs will first turn on and then turn off.
4. Release the learn button.

Erase by Remote

Receiver

Mini Screw-in Dimmer (LX-318)

1. Power off the Mini Screw-in Dimmer on your wall switch.
2. Power on the Mini Screw-in Dimmer. It will beep.
3. When it has been successfully erased it will beep again.

Wall Switch (WE-001)

1. Press the Switch Button on the Wall Switch to turn the lights on. The two blue LEDs should go off. Do not release the button.
2. Press and hold the learn button for 3 seconds, until the upper blue LED flashes.
3. Release the Learn button.

On/Off/Dimming Control (MD/MR-318)

1. Power off the On/Off/Dimming Control by turning it off on your wall switch.
2. Power on the On/Off/Dimming Control. It will beep.
3. When it has been successfully erased it will beep again.

Section 9 - Replacing the Battery




NOTE: The remote is powered by a CR-2032 Lithium battery.




NOTE: When the operating range is reduced or when the red LED is solid on during operation it is time to replace the battery.

1. Slide out the battery door.

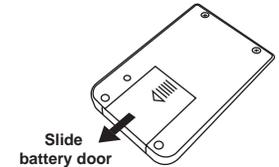

2. Remove the old battery and insert a new CR-2032 Lithium battery, positive side up.

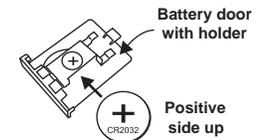

3. Insert the battery door back in the remote.
4. The red LED will be on for 1 second.



NOTE: Dispose of old batteries promptly and properly.