



UBERHAUS

Instruction sheet

4635002

Digital indoor timer TD133B

QUESTIONS? 1 (888) 599-5916 ext. 4

Our Customer Service staff is ready to provide assistance. In the case of a damaged or missing part, most replacement parts ship from our facility in two business days. For immediate help with assembly, or for additional product information, call our toll-free number: 1 (888) 599-5916 ext. 4.

SAVE THESE INSTRUCTIONS

You will need these instructions for operating procedures and warranty. Put these instructions and the original sales invoice in a safe, dry place for future reference.

Before using your timer, please read the following instructions carefully.

FEATURES:

- Up to 6 programmable settings daily.
- Two-digit hour and minute display
- 12 hour AM/PM display.
- Programmable in 5-minute increments
- Random ON/OFF security (+/- 30 minutes of programmed time)
- Manual override button: temporary, for one program period only, and permanent override.

SETTING PROCEDURE:

(5 buttons: SET, MANUAL, +, -, RESET)

- SET: to set the time and the program
- + / - : to increase or decrease the digit in setting. They are active only in programming process.
- MANUAL: To change output state to ON / OFF
- RESET: to initialize or reset the unit.
- If the LCD screen doesn't display, plug the unit into a wall receptacle for 1 hour to charge the battery.

CLOCK TIME SETTING

1. Under the normal working condition, press the SET button. The hour digits will flash on display.
2. Using '+' or '-' button set the correct hour. The setting time will increase or decrease continuously if '+' or '-' buttons are depressed for more than 1 second.
3. Press the button SET again to set minutes. The minute digits will flash on display.
4. Using '+' or '-' buttons set the correct minutes. Set time will increase or decrease continuously if '+' or '-' buttons are depressed for more than 1 second.

PROGRAMMING OF SWITCHING TIMES (ON/OFF)

1. After clock time setting has been set, press the button SET again to set the first 'ON' program time. The "PROG 1 ON" will appear on the LCD display and flash.
2. Press the '+' or '-' buttons to set the ON time of the first program. The setting time will increase or decrease continuously if '+' or '-' buttons are depressed for more than 1 second.
3. When required ON time is completed, press the SET button again to move into the first programmed OFF time. The "PROG 1 OFF" will appear on the LCD display and flash.
4. Using '+' or '-' button set the first program OFF time. The set time will increase or decrease continuously if '+' or '-' buttons are depressed for more than 1 second.
5. Pressing '+' and '-' buttons simultaneously will cancel the current program setting.
6. Repeat 1 - 4 step to set other programs ON/OFF times.
7. After program setting has been completed, press SET button to run the unit.
8. During the setting, if no operation for more than 15 seconds, the unit will leave the setting mode automatically. Preset time will be preserved.

RANDOM ON/OFF SECURITY FEATURE

Simultaneously press the SET and MANUAL buttons to enter the random mode. A "R" icon will appear on the display. Programmed ON / OFF time will randomly fluctuate in a range of +/-30 min. Simultaneously pressing the SET and MANUAL buttons again will exit the random mode.

MANUAL OVERRIDE SETTING

You can choose permanent Manual ON, Manual OFF. Press MANUAL button under ON or OFF mode, the unit will be forced into ON/OFF mode. Under the manual override mode the random function will be cancelled.

RESET BUTTON

Press the RESET button. The "AM 12:00" "PROG OFF" will appear on the LCD display and the unit will turn off your system

IMPORTANT SAFETY PRECAUTIONS

Use indoors only

Keep device out of the reach of children.
Do not plug this timer into another timer switch.
Do not plug any device performing mechanical movement directly into the timer.
Do not insert needles or any other metal objects into electrical outlet.
Avoid moisture, extreme temperatures, shock and vibration.
Do not open the timer. Repairs must be performed by authorized service personnel only.
To clean casing and display use a soft cloth. Do not use chemical or scouring agents. Do not submerge in water.

SPECIFICATIONS:

Input: 125V AC 60Hz

Output: 8 Amps at 125VAC 1000 Watts Resistive.
4.6Amps/ 575Watts Tungsten

For Indoor Use Only

Warranty

Thank you for investing in a UBERHAUS product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. In case of any malfunction of your UBERHAUS product (failure, missing part, etc.), please contact one of our service technician at our toll free service line at 1-888-599-5916 Ext 4 from 8 AM to 6 PM, Monday to Friday, Eastern time. RONA reserves the right to repair or replace the defective product, at its discretion.

Normal wear and tear, including accessory wear, is not covered under guarantee. The product is guaranteed for 12 months if used for normal trade purposes. Any guarantee is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair other than by an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed. Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.