


### REMOVABLE / REVERSIBLE DOOR HINGE INSTRUCTIONS

Enclosure comes factory assembled with a left-opening front cover. If you would like to change to a right-opening front cover, follow the instructions below.

**1**

Open front cover 90 degrees

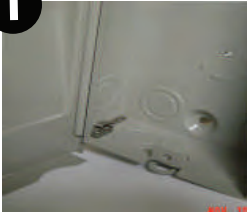

Re-insert hinge pin/rod into bottom right rolled edge of front cover until pin is sticking out top edge of cover

**5**



**2**

Insert straight-blade screwdriver under door hinge retaining clip. Lift clip slightly and pull bottom edge of cover outward.



**6**



**3**

Cover is now disengaged from the enclosure base.



**7**

Re-insert bottom end of Hinge Pin/Rod into bottom right corner of enclosure



**4**

Pull hinge pin/rod downward to remove from rolled edge of front cover.



**8**

Slide hinge pin/rod into spring receiver clip in enclosure base until you hear it snap into place.



**Reversible door installation is complete!!**

One or more of the following patents apply: 6,753,485, 6,791,039, 6,827,230B1, 6,930,268. Additional Patents pending.

### INSTALLING WIRING DEVICES INTO IWC (INSIDE WIRING COMPARTMENT)

**1**

Loosen captive screw inside of IWC. Fold out IWC.



**2**

Remove proper KO for device being installed.



**3**

FIRST: Attach wires to devices being installed. Open lever arm. Insert devices into bottom bracket.

**TIP:**  
Attach wires before installing



**TIP:**  
Use stranded wire

**4**

Close lever arm.



**5**

Fold IWC back into panel and secure captive screw.

