

## REMOVABLE / REVERSIBLE DOOR HINGE INSTRUCTIONS

Enclosure comes factory assembled with a left-opening front cover. If you would like to change to a right-opening front cover, follow the instructions below.



Re-insert hinge pin/rod into bottom right rolled edge of front cover until pin is sticking out top edge of cover



**2** Insert straight-blade screwdriver under door hinge retaining clip. Lift clip slightly and pull bottom edge of cover outward.



Insert the hinge pin into guide hole located in top right corner of enclosure



Re-insert bottom end of Hinge Pin/Rod into bottom right corner of enclosure



**4** Pull hinge pin/rod downward to remove from rolled edge of front cover.



Slide hinge pin/rod into spring receiver clip in enclosure base until you hear it snap into place.



**Reversible door installation is complete!!**

One or more of the following patents apply: 6,753,485, 6,791,039, 6,827,230B1, 6,930,268. Additional Patents pending.

## INSTALLING WIRING DEVICES INTO IWC (INSIDE WIRING COMPARTMENT)

**1**

Loosen captive screw inside of IWC. Fold out IWC.



**2**

Remove proper KO for device being installed.



**3**

FIRST: Attach wires to devices being installed. Open lever arm. Insert devices into bottom bracket.

**TIP:**  
Attach wires before installing



**TIP:**  
Use stranded wire

**4**

Close lever arm.



**5**

Fold IWC back into panel and secure captive screw.

