

Error Code 16

Explanation: Outlet water temperature is too hot. The outlet water temperature is above set point on the remote control. The unit cannot resolve the issue with the cold-water by-pass function.

