

**Error Code 32**

Explanation: Heat Exchanger Thermistor has malfunctioned. At a minimum check the following:

