

Error Code 76

Explanation: Communication Fault with Remote Control. At a minimum check the following:

1. Check remote control wiring for loose or damaged connections.
2. Bypass remote control cable by connecting remote control directly to remote control terminals on PCB. Replace cable if found to be faulty.

