

WESTEK TE55WHB

24 Hour plug-in timer with 1 grounded outlet

125 vac 1250 Watt
One grounded outlet

How to use timer:

Plug timer into wall for 1 hour.
Rechargeable battery is charged when display shows.
Battery retains programming during power outage.
Un-plug timer to set time and programming.
Plug lamp into timer.
Plug timer into wall receptacle.
Make sure receptacle has power.
Lamp must be turned ON, and bulb working.

To set current time:

Hold down **CLK** button and then push day hour and min button until current time shows.

To program:

Press **PRG** button until 1 and ON display.
Press day hour and min button to set program1 ON
Press **PRG** button until 1 and OFF display.
Press day hour and min button to set program1 OFF
Press **PRG** button until 2 and ON display.
Repeat steps to set more programs.
Set up to 7 programs
Programs repeat each 24 hours
When finished, press **CLK** button and current time displays.

To operate timer: press **MODE** button.

AUTO to run timer functions.
RDM and timer turns on-off at random times.
Manual to override timer functions.

To reset timer, press reset button using paper clip or toothpick.



Westek TE55WHB

OTHER WESTEK TIMERS



Westek TE06WHB 2-outlet programmable



Westek TM15DOLB outdoor programmable



Westek THWH21 water heater timer



Westek TMDW10 7-day programmable