

## WESTEK TE55WHB

### 24 Hour plug-in timer with 1 grounded outlet

125 vac 1250 Watt  
One grounded outlet

#### How to use timer:

Plug timer into wall for 1 hour.  
Rechargeable battery is charged when display shows.  
Battery retains programming during power outage.  
Un-plug timer to set time and programming.  
Plug lamp into timer.  
Plug timer into wall receptacle.  
Make sure receptacle has power.  
Lamp must be turned ON, and bulb working.

#### To set current time:

Hold down **CLK** button and then push day hour and min button until current time shows.

#### To program:

Press **PRG** button until 1 and ON display.  
Press day hour and min button to set program1 ON  
Press **PRG** button until 1 and OFF display.  
Press day hour and min button to set program1 OFF  
Press **PRG** button until 2 and ON display.  
Repeat steps to set more programs.  
Set up to 7 programs  
Programs repeat each 24 hours  
When finished, press **CLK** button and current time displays.

#### To operate timer: press **MODE** button.

AUTO to run timer functions.  
RDM and timer turns on-off at random times.  
Manual to override timer functions.

To reset timer, press reset button using paper clip or toothpick.



**Westek TE55WHB**

## OTHER WESTEK TIMERS



Westek TE06WHB 2-outlet programmable



Westek TM15DOLB outdoor programmable



Westek THWH21 water heater timer



Westek TMDW10 7-day programmable