



Westinghouse

3-Outlet Timer Power Stake

3-Outlet Ground Stake with Digital Weekly Timer

Three 3-wire Grounded Outlets with covers
 Rated: 125V 60Hz, 15A 1.875W Resistive Load
 CR 2032 3V Lithium Battery
 10Ft (3.04m) AWG14 STJW Power Cord
 Customer Service: 1.800.730.3707

BEFORE INITIAL USE:

Before using the timer, follow the instructions below to install the backup battery.

- ① Turn the battery compartment cover counterclockwise to OPEN.
- ② Take out the battery compartment.
- ③ Remove the RED battery insulation tape.
- ④ Close the battery compartment.
- ⑤ Turn the battery compartment cover clockwise to CLOSE.

NOTE: For battery replacement, use CR 2032 Lithium battery.

The timer is now ready for use.

SET CURRENT TIME:

- ① Press and hold the “TIME” button, then press the “WEEK” button to set the current day.
- ② Press and hold the “TIME” button, then press the “HOUR” button to set the current hour.
- ③ Press and hold the “TIME” button, then press the “MIN” button to set the current minute.

SET PROGRAM:

- ① Press the “PROG” button to enter the program setting; you will see all the days of the week on the top and “1 ON” to the left of the display.
- ② Press the “WEEK” button to set the program “1 ON” days of the week that you want the timer to function.
- ③ Press the “HOUR” button to set the program “1 ON” hour.
- ④ Press the “MIN” button to set the program “1 ON” minute.
- ⑤ Press the “PROG” button once and repeat step 2 to 4 to set program “1 OFF”.
- ⑥ After setting the program “1 OFF” press the “TIME” button once to return to the current time.

You can set up to 8 different ON and OFF times for your timer. To do so, just repeat step 2 to 5 for program “2 ON”, “2 OFF”, “3 ON” etc...


MANUAL OVERRIDE:

Pressing the “ON/OFF AUTO” button when the current time is being displayed will allow you to set the status of the timer:

- If “ON” is to the left side of the display, the timer will be active until the “ON/OFF AUTO” button is pressed.
- If “OFF” is to the left side of the display, the timer will not activate until the “ON/OFF AUTO” button is pressed.
- If “AUTO” is to the left side of the display, the timer will run on the program setting until the “ON/OFF AUTO” button is pressed.

NOTES:

- ① The unit you are plugging into the timer has to be on.
- ② Make sure AM and PM are correct on the current time and in the program settings.

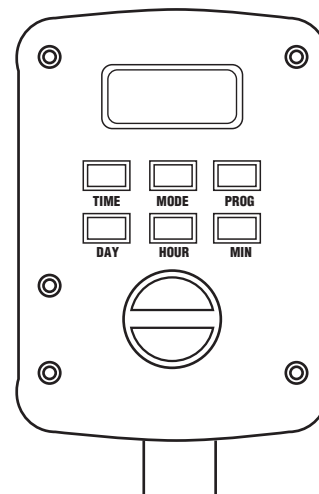

PACKAGING AND USE INSTRUCTIONS

General

An outdoor seasonal-use cord-connected wiring device shall contain all of the following or equivalent statements (following the word CAUTION) on the outer surface of the smallest unit package or on a stuffer sheet or tag (or its equivalent):

- ① **CAUTION – Risk of Fire.** Not for permanent installation. Use only with a total of 12 Ampere maximum Christmas-tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.
- ② If using Christmas tree or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (pushin) lamps to this cord set.
- ③ Cord sets shall be plugged into a GFCI-protected receptacle.
- ④ If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
- ⑤ After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- ⑥ For temporary outdoor installation and use
– Not to exceed 90 days

SAVE THESE INSTRUCTIONS!



Westinghouse  and “You can be sure... if it’s Westinghouse” are trademark of Westinghouse Electric Co. and are used under license by The NCC, Inc.

Distributed by: The NCC, Inc., Brooklyn, NY 11220 • www.thencc.com

Made in China