



## 3-Outlet Timer Power Stake

### 3-Outlet Ground Stake with Digital Weekly Timer

Three 3-wire Grounded Outlets with covers  
Rated: 125V 60Hz, 15A 1,875W Resistive Load  
CR 2032 3V Lithium Battery  
10Ft (3.04m) AWG14 STJW Power Cord  
Customer Service: 1.800.730.3707

#### BEFORE INITIAL USE:

Before using the timer, follow the instructions below to install the backup battery.

- ① Turn the battery compartment cover counterclockwise to OPEN.
- ② Take out the battery compartment.
- ③ Remove the RED battery insulation tape.
- ④ Close the battery compartment.
- ⑤ Turn the battery compartment cover clockwise to CLOSE.

**NOTE:** For battery replacement, use CR 2032 Lithium battery.  
The timer is now ready for use.

#### SET CURRENT TIME:

- ① Press and hold the “**TIME**” button, then press the “**WEEK**” button to set the current day.
- ② Press and hold the “**TIME**” button, then press the “**HOUR**” button to set the current hour.
- ③ Press and hold the “**TIME**” button, then press the “**MIN**” button to set the current minute.

#### SET PROGRAM:

- ① Press the “**PROG**” button to enter the program setting; you will see all the days of the week on the top and “**1 ON**” to the left of the display.
- ② Press the “**WEEK**” button to set the program “**1 ON**” days of the week that you want the timer to function.
- ③ Press the “**HOUR**” button to set the program “**1 ON**” hour.
- ④ Press the “**MIN**” button to set the program “**1 ON**” minute.
- ⑤ Press the “**PROG**” button once and repeat step 2 to 4 to set program “**1 OFF**”.
- ⑥ After setting the program “**1 OFF**” press the “**TIME**” button once to return to the current time.

You can set up to 8 different ON and OFF times for your timer. To do so, just repeat step 2 to 5 for program “**2 ON**”, “**2 OFF**”, “**3 ON**” etc...


#### MANUAL OVERRIDE:

Pressing the “**ON/OFF AUTO**” button when the current time is being displayed will allow you to set the status of the timer:

- If “**ON**” is to the left side of the display, the timer will be active until the “**ON/OFF AUTO**” button is pressed.
- If “**OFF**” is to the left side of the display, the timer will not activate until the “**ON/OFF AUTO**” button is pressed.
- If “**AUTO**” is to the left side of the display, the timer will run on the program setting until the “**ON/OFF AUTO**” button is pressed.

#### NOTES:

- ① The unit you are plugging into the timer has to be on.
- ② Make sure AM and PM are correct on the current time and in the program settings.

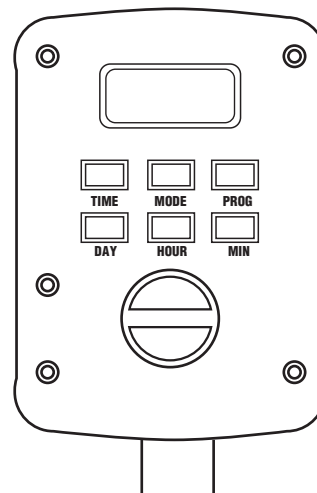

#### PACKAGING AND USE INSTRUCTIONS

##### General

An outdoor seasonal-use cord-connected wiring device shall contain all of the following or equivalent statements (following the word CAUTION) on the outer surface of the smallest unit package or on a stuffer sheet or tag (or its equivalent):

- ① **CAUTION – Risk of Fire.** Not for permanent installation. Use only with a total of 12 Ampere maximum Christmas-tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.
- ② If using Christmas tree or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (pushin) lamps to this cord set.
- ③ Cord sets shall be plugged into a GFCI-protected receptacle.
- ④ If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
- ⑤ After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- ⑥ For temporary outdoor installation and use – Not to exceed 90 days

## SAVE THESE INSTRUCTIONS!

