



Westinghouse

6-Outlet Yard Stake with Dual Timers

All Weather 6-Outlet Safety Power Station

with Digital Photocell Timer & Programmable 7 Day Digital Timer

NOTE: To set up Timer for the first time, plug in the timer for 10 minutes, then insert a sharp pointed object or opened paper clip into the pin hole marked **“Reset”** to clear all settings.

To Use Digital Timer

Slide Switch To **“Timer”**

To Set Current Time While time appears in the LCD.

- 1 Push **“Setting”** button once. The time will be flashing.
- 2 Push **“Day”** button until current day appears on top.
- 3 Push **“Hour”** button until current hour appears (make sure to cycle through hours until **AM** or **PM** appears to the right of the time).
- 4 Push **“Min”** button until current minute appears. (Holding **“Min”** button down for more than 3 seconds will make hour advance rapidly.)
- 5 Push the **“Setting”** button to complete the program.

To Set Program

Slide Switch To **“Timer”**

- 1 Push the **“Current Time”** button once. The words **“Program 1 ON”** will appear.
- 2 Push the **“Setting”** button once. The time and day will be flashing.
- 3 Push the **“Day”** button until the desired day of your program appears.
The choices in order are:

MO – Monday Only	FR – Friday Only	SA-SU – Weekends
TU – Tuesday Only	SA – Saturday Only	MO-SA – Monday through Saturday
WE – Wednesday Only	SU – Sunday Only	MO-SU – Every Day
TH – Thursday Only	MO-FR – Weekdays	

- 4 Push the **“Hour”** button until the desired On hour appears. Make sure that **AM** or **PM** appears as desired.
- 5 Push the **“Min”** button until the desired On minute appears.
- 6 Push the **“Setting”** button to complete the program.
- 7 Push the **“Timer Set”** button. The words **“Program 1 OFF”** will appear. Repeat steps 2 to 6 to set the time for the timer to power Off.
- 8 Repeat 2, 3, 4, 5, 6, and 7 above to set the additional **ON/OFF** times as desired.

Push the **“Current Time”** button to return to the current time. Multiple programs (up to 6) can be entered. Simply push **“Timer Set”** button to cycle through to the next available program.

To Use Photo Cell Timer

Slide Switch To **“Photo Cell”**

- 1 Push the **“Current Time”** button once. You will see the words: **On At Dusk**, **Off at Dawn**. (This means the plugged-in device will be powered **ON** when it gets dark, and will shut **OFF** when the sun comes up.)
- 2 Push the **“Photo Set”** button repeatedly to cycle through the number of hours after Dusk that your timer will stay on.

Notes:

- You can program the **Photo Cell** timer to turn **OFF** at Dawn, or from 1 to 12 hours after Dusk.
- Be sure to place any lights at least 6ft (1.82m) away from the timer, so that the bulb does not affect the light sensor.

Always On

- The unit can be set to manually power on.
- Simply push **“Manual ON/OFF”** button to **“ALWAYS ON”** mode.
- If you want to disable the **“ALWAYS ON”** function, simply push the **“Manual ON/OFF”** button once.

Ni-MH battery included. 10Min Charge retains program for up to 1 months. Full charge retains for more than 2 months.



Packaging and Use Instructions

General

An outdoor seasonal-use cord-connected wiring device shall contain all of the following or equivalent statements (following the word **CAUTION**) on the outer surface of the smallest unit package or on a stuffer sheet or tag (or its equivalent):

- 1 **CAUTION – Risk of Fire.** Not for permanent installation. Use only with a total of 12 Ampere maximum Christmas-tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.
- 2 If using Christmas tree or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (pushin) lamps to this cord set.
- 3 Cord sets shall be plugged into a GFCI-protected receptacle.
- 4 If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
- 5 After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- 6 For temporary outdoor installation and use – Not to exceed 90 days

10Ft. (3.0m) AWG 12/3 SJTW
Rated 125V/ 60Hz/15A/1875W

Contains Ni-MH (nickel metal hydride) battery. Battery must be recycled or disposed of properly.

Customer Service Assistance: Toll Free 1-800-730-3707

Interactive Programming & Operating Tutorial for this item available online at: www.thencc.com

