


TimeIt

Outdoor Photocell Countdown Timer

3-Wire Grounded Outlet and Plug
Rated: 125V/8A/1000WTungsten/60Hz

Customer Service: 1.800.730.3707

28457_00457 Outdoor Timer

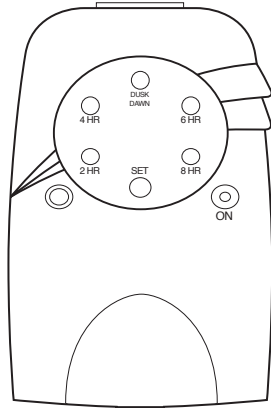

INSTRUCTIONS:

Plug the timer into the power outlet - the Digital LED will light up.

- ① When you first plug in the timer the 5 LED indicators on the circle panel will flash 2 seconds to indicate warming up.
- ② Press the "SET" button on the bottom of the circle panel to cycle through the different timer settings:

LED	Timer Mode
2 HR	Timer will turn ON at Dusk, and turn OFF 2 hours later
4 HR	Timer will turn ON at Dusk, and turn OFF 4 hours later
6 HR	Timer will turn ON at Dusk, and turn OFF 6 hours later
8 HR	Timer will turn ON at Dusk, and turn OFF 8 hours later
DUSK/DAWN	Timer will turn ON at Dusk, and turn OFF at Dawn
ON	Timer will turn ON immediately and remain ON until the "SET" button is pressed
(none)	Timer is OFF

NOTES:

The unit you are plugging into the timer has to be on.

WARNING:

When used outdoors this timer must be plugged into a GFCI protected outlet to prevent shock hazard. Let the switch hang downward so moisture doesn't accumulate in the outlet. Install cord and unit above ground level with the receptacle in downward minimum 1.5m above ground. Suitable for damp locations. Not for water immersion or for use were directly exposed to water. Store indoors when not in use.

DO NOT splice, repair or modify. Unplug when not in use. Fully insert plug. DO NOT use damaged remote sets. Inspect periodically. Use within the electrical rating as the specification. DO NOT plug more than a total 1,000 watts in this unit. If watts are not marked on appliance, multiply ampere rating (on nameplate) by 125 to determine equivalent watts. Add determined watts for each plugged-in appliance or lamp (sum of watts on bulbs) to find total watts being used. Operating temperature range -30C (-22F) to 45C (113F).

LIMITATIONS OF TIMING DEVICES:

Timing devices require power to function properly. If AC power to the timer is cut off, a light or other device plugged into the timer will not work.

SAVE THESE INSTRUCTIONS!