

IN-WALL

# TIMER

## COUNTDOWN

Instructions for model 59711, 59712, 59713, 59714, 59715, 59716, 59717, 59718, 59719, 59727, 59728, 59729 Electronic In-Wall Timer

Before using your timer, please read the following instructions carefully.

**FEATURES:**

- **MINIMUM SETTING TIME:**  
All 6 minutes
- **MAXIMUM SETTING TIME:**  
Model 59711, 59712, 59713, 59727 15 minutes  
Model 59714, 59715, 59716, 59728 30 minutes  
Model 59717, 59718, 59719, 59729 60 minutes
- **OPERATING TEMPERATURE:** +10 to 40°C
- Automatically turns OFF house fans, lights and more

**INSTALLATION:**

**WARNING: INSTALLATION SHOULD BE MADE BY A LICENSED ELECTRICIAN.**

1. Before you install your new timer (B), turn off the main power supply at the fuse panel.
2. Remove the timer knob (G).
3. Strip off about 1/2" of rubber insulation from the ends of the two timer wires (A).
4. Using wire connectors (C), connect each of the two lines coming out of the timer to the two wires coming out of your back wall box as shown.
5. Carefully put the connected wires and the timer unit into wall box, and secure unit with two screws (D) to the back wall box.

Diagram A operation for model 59711, 59712, 59714, 59715, 59717, 59718, 59727, 59728, 59729

6. Install the wall plate (E) and secure with two screws (H).
7. Install the decorator filler plate (F) and secure with lock nut (I).
8. Install the knob (G) back onto the timer and turn main power back on.

Diagram B operation for model 59713, 59716, 59719

6. Install the wall plate (E) and secure with two screws (H).
7. Install the knob (G) back onto the timer and turn main power back on.

Set time by turning the knob clockwise past 6 minutes to turn your timer ON.

FOR INDOOR USE ONLY.

DO NOT EXCEED RATED CAPACITY.

SPST  
 125V / 60 Hz  
 20A / 2400W Resistive (general purpose)  
 .A / 1000W Tungsten (lighting)  
 5A / 625VA Fluorescent (ballast)  
 15FLA, 90LRA

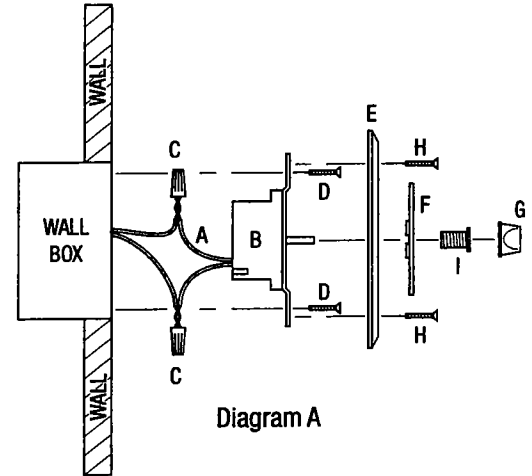


Diagram A

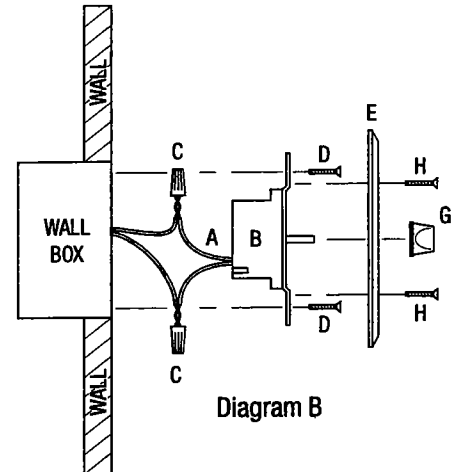


Diagram B

- A. Timer Wires
- B. Timer
- C. Wire Connector
- D. Screw for Wall
- E. Wall Plate
- F. Decorator filler plate (Dia. A only)
- G. Knob
- H. Screw for Wall Plate
- I. Lock nut for decorator filler plate (Dia. A only)



Coleman Cable, Inc.  
 Waukegan, IL 60085  
 © 2008 Coleman Cable, Inc.  
 Printed in China