

# Yard Master™

## Model 13547 Yard Stake with Outdoor Mechanical Timer

### Installation:

1. Insert stake 6" into ground.
2. Snap on connector (the stake and connector will be permanently connected).
3. Place timer/multi-outlet unit on top of connector and rotate until tightly connected.

### Timer Instructions:

Rotate dial to desired setting:

**Off** – Always OFF

**On** – Always ON

**Dusk-Dawn** – Lights turn ON automatically at dusk and OFF at dawn\*

**2,4,6,8 hours** – Lights turn ON automatically at dusk and OFF 2, 4, 6, 8 hours later\*

\*Cycle repeats every 24 hours.

### IMPORTANT SAFETY INSTRUCTIONS: SAVE THESE INSTRUCTIONS

**CAUTION:** Risk of Fire. Not for permanent installation. Use only with a total of 8 Ampere maximum Christmas tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.

If using Christmas tree or decorative lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.

Cord sets shall be plugged into a GFCI-protected receptacle.

If using an outdoor-use cord set for an extended period of time, (greater than 90 days), please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.

After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

6 ft. 14/3 SJTW cord

60 Hz

15A / 125V / 1875W Resistive (general purpose)

15A / 120V / 1800W Tungsten (lighting)



Coleman Cable, Inc.  
Waukegan, IL 60085  
© 2008 Coleman Cable, Inc.  
Printed in China