

INDOOR WIRELESS REMOTE

OUTLETS

REMOTE CONTROL

Model 13568 and 13569 Indoor Wireless Remote

SET UP

1. Plug the Receiver into a standard 125-volt AC electrical outlet.
2. Confirm that the electrical specifications of an item you wish to use with this product do not exceed those specified in the "Electrical Specifications" section. Plug the item into an outlet of the Receiver.
3. Remove the plastic battery tab from the Battery compartment in the back of the Remote Control to activate the DC 12V Type A23 pre-installed battery.

TO USE

1. To set up the three Receivers (outlets) with various devices, locate channel 1, 2, 3, on the Remote Control and the 1, 2, 3, on the sticker on each Receiver and select ON/OFF function with same channel (CH 1, CH 2, CH 3.....) respectively.
2. To activate the Receiver, press the ON Button of the Remote Control. The red LED of the Remote Control will illuminate momentarily and the LED of the Receiver will remain illuminated.
3. To turn the Receiver OFF, press the OFF Button of the Remote Control. The LED on the receiver will shut off.


BATTERY HANDLING AND USAGE

WARNING: Keep batteries away from children and pets.

- Follow the battery manufacturer's safety and usage instructions.
- Insert the battery observing the proper polarity (+/-) as indicated inside the Battery Compartment.
CAUTION: Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged battery from the product. Remove the battery when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

BATTERY REPLACEMENT

1. Remove the Battery Compartment Cover from the back of the Remote Control by sliding the Cover in the direction that its treads curve.
2. Remove the spent battery and place a new DC 12V Type A23 battery into the Battery Compartment, correctly observing the polarity indications (+/-) inside the Battery Compartment.
3. Replace the Battery Compartment Cover.

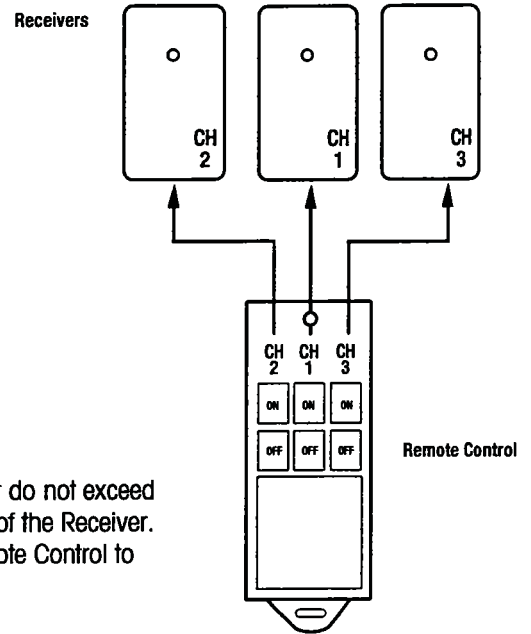

Range: Up to 66 ft.
13A / 1625W Resistive (general purpose)
1000W Tungsten (lighting)
1/3 HP
125VAC, 60 Hz
12V battery
Frequency: 315 MHz



Coleman Cable, Inc.
Waukegan, IL 60085
© 2008 Coleman Cable, Inc.
Printed in China