

OUTDOOR **DIGITAL**
TIMER

WITH PHOTOELECTRIC EYE



Model 13660 Outdoor Digital Timer

Instructions

- F** – Always OFF
- 0** – Always ON
- 1-9** – ON at dusk and Off 1 to 9 hours later, as set
- D** – ON at dusk, OFF at dawn
- 1.-9.** – ON immediately and Off 1 to 9 hours later, as set

DO NOT SUBMERGE IN WATER.

Use a 3 conductor, GFCI-protected outlet.

This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

DO NOT EXCEED RATED CAPACITY:

- 6' 18/3 SJTW cord
- 120V / 60 Hz
- 8.3A / 1000W Resistive (general purpose)
- 8.3A / 1000W Tungsten (lighting)

