

OUTDOOR DIGITAL  
**TIMER**

**WITH PHOTOELECTRIC EYE**



## Model 13660 Outdoor Digital Timer

### Instructions

- F** – Always OFF
- 0** – Always ON
- 1-9** – ON at dusk and Off 1 to 9 hours later, as set
- D** – ON at dusk, OFF at dawn
- 1.-9.** – ON immediately and Off 1 to 9 hours later, as set

DO NOT SUBMERGE IN WATER.

Use a 3 conductor, GFCI-protected outlet.

This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

DO NOT EXCEED RATED CAPACITY:

6' 18/3 SJTW cord  
120V / 60 Hz  
8.3A / 1000W Resistive (general purpose)  
8.3A / 1000W Tungsten (lighting)



Coleman Cable, Inc.  
Waukegan, IL 60085  
© 2008 Coleman Cable, Inc.  
Printed in China