

# Yard Master™

## Model 17321 Yard Stake with Outdoor Mechanical Timer

### Installation:

1. Insert stake 6" into ground.
2. Snap on connector (the stake and connector will be permanently connected).
3. Place timer/multi-outlet unit on top of connector and rotate until tightly connected.

### Timer Instructions:

Rotate dial to desired setting:

**Off** – Always OFF

**On** – Always ON

**Dusk-Dawn** – Lights turn ON automatically at dusk and OFF at dawn\*

**2,4,6,8 hours** – Lights turn ON automatically at dusk and OFF 2, 4, 6, 8 hours later\*

\*Cycle repeats every 24 hours.

### IMPORTANT SAFETY INSTRUCTIONS: SAVE THESE INSTRUCTIONS

**CAUTION:** Risk of Fire. Not for permanent installation. Use only with a total of 8 Ampere maximum Christmas tree or other seasonal lighting products. Do not install or use this product for more than a 90-day period.

If using Christmas tree or decorative lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (push-in) lamps to this cord set.

Cord sets shall be plugged into a GFCI-protected receptacle.

If using an outdoor-use cord set for an extended period of time, (greater than 90 days), please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.

After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.

6 ft. 14/3 SJTW cord  
60 Hz  
15A / 125V / 1875W

### WARNING:

Instructions shall caution users that modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

The following or equivalent as appropriate:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operations.



Coleman Cable, Inc.  
Waukegan, IL 60085  
© 2008 Coleman Cable, Inc.  
Printed in China