

OUTDOOR

POWER SWITCH

WITH REMOTE CONTROL

Model 32555 Outdoor Remote Control Power Switch

Instructions

Power Switch is pre-programmed and ready to use.
Just plug the Power Switch into any 3 conductor, GFCI protected outlet.

Push the remote controller ON/OFF button to control any device connected to the Power Switch.

NOTE: If the device connected to the Power Switch does not respond, the 12V battery in the remote controller may need replacing.

DO NOT SUBMERGE IN WATER.

DO NOT EXCEED RATED CAPACITY.

Use a 3 conductor, GFCI-protected outlet.

This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

Up to 60ft/13.8m Range (attained in open air conditions)

6" 16/3 SJTW cord

125V / 60Hz

13A / 1625W Resistive (general purpose)

8A / 1000W Tungsten (lighting)

12V Battery (included)



Coleman Cable, Inc.
Waukegan, IL 60085
© 2010 Coleman Cable, Inc.
Printed in China