

NOMA

CONSUMER
ELECTRICAL

24-Hour Heavy Duty Outdoor Timer CAT. NO. N1506 OWNERS MANUAL

CONGRATULATIONS

on your purchase of Noma's 24-hour heavy duty outdoor timer, an easy-to-use product designed to save energy in a multitude of applications. The heavy duty 1875 watt rating makes it ideal for block heaters, car warmers, security or decorative outdoor lights, and more.

WHAT DO YOU DO

TO INSTALL

Plug it in

TO SET CURRENT TIME

Press Time button

Continue pressing until right time appears in window.

[Note: A dot • at the bottom right corner of the display indicates P.M. hours]

TO SET ON AND OFF TIMES FOR TIMER OPERATION

Press Mode button

Press Time button repeatedly until required starting time appears in window.

Press Mode button again

Press Time button repeatedly until required ending time appears in window.

[Note: A dot • at the bottom right corner of the display indicates P.M. hours]

Press Mode button

Programming is now complete. You may now plug in the block heater, lights or other devices to be timed. The devices will turn on and off automatically every day at the times that you have just selected.

TO REVIEW PROGRAM

Press Time button

HOW THE TIMER RESPONDS

Flashes the letter C.

Advances to 1 a.m.

Displays current time to nearest hour.

[Note: A dot • at the bottom right corner of the display indicates P.M. hours]

Flashes P, inviting you to set the program.

Displays starting time.

Flashes E.

Displays ending time.

Returns to display the current time.

Displays successively, for 1-2 seconds each:

P, starting hour and E, ending hour.

Then returns to show the current time.

TO CHANGE YOUR PROGRAM


Unplug the timer, which will discontinue the current program. After 10 seconds, plug it in again and proceed to set current time. Then continue with the programming steps shown above.

FOR MANUAL OVERRIDE

Pressing the Mode button at any time will turn on the devices plugged into the timer. The display will indicate the letter O. The devices will remain on until the ending time of the daily program. To return the timer to the automatic mode prior to that hour, press the Mode button again. The display will return to show the current time.

AFTER A POWER INTERRUPTION/FAILURE

The timer will return to displaying a flashing C and the devices plugged into it will be off. To restore automatic timer control, repeat the steps above to set the current time and On/Off times.

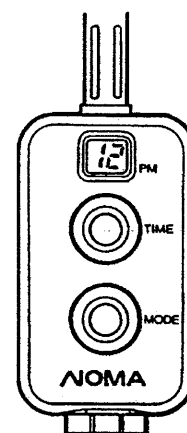

If further assistance is required call:
1-800-561-4321 (Canada & USA) 416-267-4614 (Greater Toronto Area)
Monday-Friday 8:30 am - 5:00 pm Eastern Standard Time