

OUTDOOR MECHANICAL  
**TIMER**

WITH NEVER-LOSE PINS



## Model 49640 and 59204 Outdoor Mechanical Timer

### Instructions

1. To set the current time, rotate the dial until the time lines up with the arrow.
2. To program the timer, push the pins outward for the periods of time you want the timer to be ON and push the pins in toward the center dial for the periods of time you want the timer to be OFF.
3. Set the switch to **TIMER**. Plug device into the timer and turn the device on.  
Plug timer into outlet.
4. Programmed settings repeat each day.
5. To override the timed settings, move the switch to **MANUAL**.

DO NOT SUBMERGE IN WATER.

DO NOT EXCEED RATED CAPACITY.

Use a 3 conductor, GFCI-protected outlet.

This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

DO NOT EXCEED RATED CAPACITY:

8' 14/3 SJTW cord

125V / 60 Hz

15A / 1875W Resistive (general purpose)

10A / 1250W Tungsten (lighting)

1/2 HP



Coleman Cable, Inc.  
Waukegan, IL 60085

© 2008 Coleman Cable, Inc.

Printed in China