

OUTDOOR DIGITAL TIMER

HEAVY DUTY

<http://waterheatertimer.org/Woods-timers-and-manuals.html#13660>

Woods®



Model 49643 and 59403 Heavy Duty Outdoor Digital Timer

Before using your timer, please read the following instructions carefully.

TIME START UP

To activate the battery (one AA battery is provided with the timer), pull the tab sticking out of the battery door.

All of the display shows for 3 seconds, then the display will read as shown in Fig. 2.



Fig. 2

SETTING THE CLOCK

While holding the Clock button down:

1. Press the DAY button until the display shows the current day.
2. Press the HOUR button until the display shows the current hour.
3. Press the MIN (MINUTE) button until the display shows the current minute.

SETTING PROGRAMS

Press the PROG (Program) button once. The display will look as shown in Fig. 3. You will now set up the time in which you want your device turned ON:

1. The number 1 in the lower left hand corner indicates that you are now programming EVENT 1.
2. Press the Day button repeatedly until the display shows the day in which you want the timer to turn on.

 


Fig. 3

The options are:

- a. All days of the week (MO TU WE TH FR SA SU)
 - b. Individual days of the week (MO, etc)
 - c. Weekdays only (MO TU WE TH FR)
 - d. Weekdays only (SA SU)
3. PRESS the HOUR and MIN (Minute) buttons to set up the time of day when you want the timer to turn on.

Press the PROG (Program) button once again. The display reads as shown in Fig. 4. You will now set up the time in which you want your device turned OFF, in EVENT1.

1. Repeat steps 2 and 3 above.

 


Fig. 4

Repeat the ON and OFF program procedures outlined above for each event (up to 7 events), as needed.

When programming is complete, press the CLOCK button to return to the current time display.

REVIEWING YOUR EVENT PROGRAMMING

1. In the current time display, press the PROG (Program) button repeatedly to check your settings.
2. When finished, press CLOCK to return to the current time display.

SETTING THE MODE

The Mode acts as an ON or OFF override, or sets the Events to Automatic or Random:

1. To override the current program (ON or OFF), press MODE once.
2. To override the current program (Automatic), press MODE once.
3. To run the events in a RANDOM mode (ON/OFF is +/- 30 minutes of programmed times) press MODE until "RDM" is displayed in the upper left hand corner. The RANDOM mode is a security feature that will give your home a more lived-in look.

INSTALLING THE TIMER

1. DO NOT SUBMERGE IN WATER.
2. DO NOT EXCEED RATED CAPACITY.
3. Use a 3 conductor, GFCI-protected outlet.
4. This device must be mounted in a vertical position with the receptacle facing downwards and the receptacle not reaching the ground level.

BATTERY REPLACEMENT

1. This timer runs on one AA battery.
2. To remove the battery, unscrew the battery door, using a Phillips screwdriver.
3. Remove the battery and replace with a fresh AA battery.
4. Tightly screw the battery door in place.

Ratings: 15 Amp Resistive, 1000 Watts
Tungsten, 1/4 H.P., 120 VAC, 60Hz



Coleman Cable, Inc.
Waukegan, IL 60085
© 2008 Coleman Cable, Inc.
Printed in China