


INTERMATIC® RAIN TIGHT OUTDOOR TIMER

PROGRAM REPEATS EVERY 24 HOURS

TO SET TIMER: (SEE ILLUSTRATION)

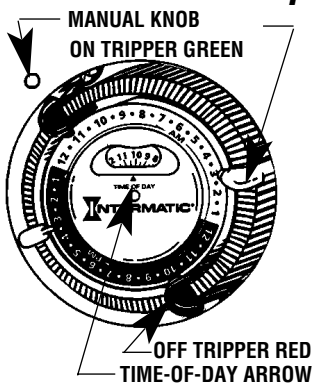

1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE** → one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.
3. Turn lamp or appliance **ON**.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into

wall outlet, suitable for "wet locations" if outdoors.

FOR EARLY ON OR OFF OPERATION,

Turn manual knob counter clockwise ← to desired **ON** or **OFF** position, Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

WARNING: To avoid shock hazard, timer must be installed **VERTICALLY** and at least 3 ft. **ABOVE** ground level. **WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER. WHEN USED WITH EXTENSION CORD OR DEVICES DO NOT EXCEED THEIR RATING OR 15 AMPS.**

MODEL: HB31R 15 AMP (1800 WATT) RESISTIVE; 15 AMP (1800 WATT) TUNGSTEN; 15 FLA (90 LRA) MOTOR-120 VOLT 60 HZ.

INTERMATIC INCORPORATED
154SB19358

