


TimeIt

Weekly Digital Timer

2-Wire Polarized Outlet and Plug
Rated: 120V/10A/1200W/60Hz
Customer Service: 1.800.730.3707

READ ALL INSTRUCTIONS - IMPORTANT!
Before using the timer plug it in for 10 - 15 minutes; then press the reset button

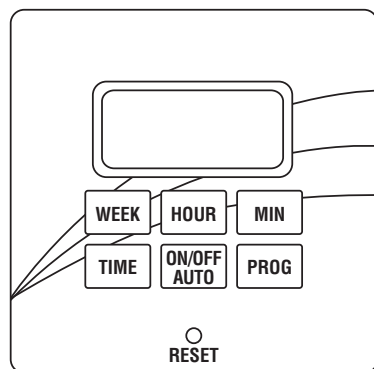


TimeIt

Minuterie Digitale Hebdomadaire

Sortie et fiche polarisées a deux lames
Calibré: 120V/10A/1200W/60Hz
Service aux clients: 1.800.730.3707

IL EST IMPORTANT DE LIRE TOUTES LES INSTRUCTIONS!
Avant de programmer la minuterie, branchez-la de 10 à 15 minutes, puis poussez le bouton de réarmement "RESET"

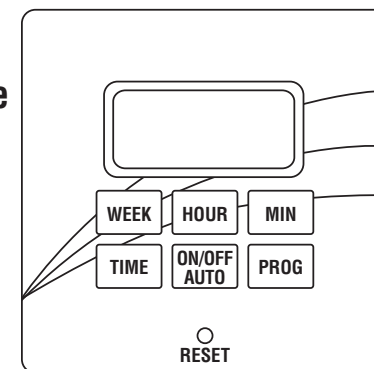

SET CURRENT TIME:

- 1 Press and hold the "TIME" button, then press the "WEEK" button to set the current day.
- 2 Press and hold the "TIME" button, then press the "HOUR" button to set the current hour.
- 3 Press and hold the "TIME" button, then press the "MIN" button to set the current minute.

SET PROGRAM:

- 1 Press the "PROG" button to enter the program setting; you will see all the days of the week on the top and "1 ON" to the left of the display.
- 2 Press the "WEEK" button to set the program "1 ON" days of the week that you want the timer to function.
- 3 Press the "HOUR" button to set the program "1 ON" hour.
- 4 Press the "MIN" button to set the program "1 ON" minute.
- 5 Press the "PROG" button once and repeat step 2 to 4 to set program "1 OFF".
- 6 After setting the program "1 OFF" press the "TIME" button once to return to the current time.

You can set up to 8 different ON and OFF times for your timer. To do so, just repeat step 2 to 5 for program "2 ON", "2 OFF", "3 ON" etc...

MANUAL OVERRIDE:

Pressing the "ON/OFF AUTO" button when the current time is being displayed will allow you to set the status of the timer:

- If "ON" is to the left side of the display, the timer will be active until the "ON/OFF AUTO" button is pressed.
- If "OFF" is to the left side of the display, the timer will not activate until the "ON/OFF AUTO" button is pressed.
- If "AUTO" is to the left side of the display, the timer will run on the program setting until the "ON/OFF AUTO" button is pressed.

SET VACATION SECURITY:

Pressing the "TIME" and "PROG" buttons simultaneously will activate security mode. If "SEC" is to the right side of the display the timer will turn on randomly during different parts of the day. Simply press "TIME" and "PROG" simultaneously to disable "SEC".

NOTES:

- 1 The unit you are plugging into the timer has to be on.
- 2 Make sure AM and PM are correct on the current time and in the program settings.

SAVE THESE INSTRUCTIONS!

REGLAGE DE L'HEURE COURANTE:

- 1 Poussez et tenez le bouton "TIME", ensuite poussez le bouton "WEEK" pour entrer le jour courant.
- 2 Poussez et tenez le bouton "TIME", ensuite poussez le bouton "HOUR" pour entrer l'heure courante.
- 3 Poussez et tenez le bouton "TIME", ensuite poussez le bouton "MIN" pour entrer la minute courante.

RÉGLAGE DU PROGRAMME:

- 1 Poussez le bouton "PROG" pour régler le programme, vous verrez tous les jours de la semaine en haut et "1 ON" à la gauche de l'écran.
- 2 Poussez le bouton "WEEK" pour régler le programme "1 ON" pour les jours de la semaine ou vous désirez que la minuterie fonctionne.
- 3 Poussez le bouton "HOUR" pour régler le programme "1 ON" pour l'heure.
- 4 Poussez le bouton "MIN" pour régler le programme "1 ON" pour la minute.
- 5 Poussez une fois le bouton "PROG" et répétez les étapes de 2 à 4 pour régler le programme "1 OFF".
- 6 Après avoir réglé le programme "1 OFF" poussez une fois le bouton "TIME" pour retourner à l'heure courante.

Vous pouvez utiliser jusqu'à 8 réglages ON et OFF différents sur votre minuterie. Il s'agit de répéter les étapes de 2 à 5 pour "2 ON", "2 OFF", "3 ON" etc...

COMMANDE MANUELLE:

En poussant le bouton "ON/OFF AUTO" alors que l'heure actuelle est affichée, vous permettra de régler la minuterie:

- Si "ON" apparaît à la gauche de l'afficheur la minuterie sera active jusqu'à ce que "ON/OFF AUTO" soit pressé.
- Si "OFF" apparaît à la gauche de l'afficheur la minuterie sera inactive jusqu'à ce que "ON/OFF AUTO" soit poussé.
- Si "AUTO" apparaît à la gauche de l'afficheur, la minuterie opérera selon les ajustements du programme jusqu'à ce que "ON/OFF AUTO" soit poussé.

RÉGLAGE DE SÉCURITÉ POUR VACANCES:

En poussant simultanément les boutons "TIME" et "PROG" vous activerez le mode de sécurité. Si "SEC" apparaît à la droite de l'afficheur, la minuterie opérera aléatoirement durant différentes parties de la journée. Poussez simplement "TIME" et "PROG" simultanément et vous désactiverez le mode "SEC".

NOTES:

- 1 L'appareil branché dans la minuterie doit être à ON (ouvert).
- 2 Assurez-vous que les positions AM et PM sont ajustées selon l'heure courante et aussi pour les ajustements des autres programmes.

CONSERVEZ CE MODE D'OPÉRATION!