


IN-WALL DIGITAL

TIMER


COUNTDOWN

Model 59007, 59008, 59013, 59014, 59720, 59726 In-Wall Digital Timer


Before using your timer, please read the following instructions carefully.

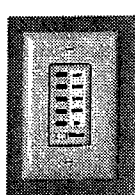


59007 (white)
59720 (light almond)
59726 (ivory)

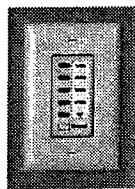

59008

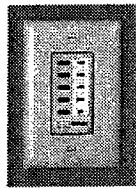

59013

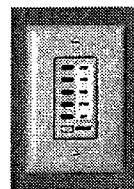

59014

FEATURES

- Turns lights and fans automatically off
- 59007/59720/59726: 5-10-15-30 - minute time ranges with illuminated time indicator
- 59008: 10-20-30-60 - minute time ranges with illuminated time indicator
- 59013: 1-2-4-8 - hour time ranges with illuminated time indicator
- 59014: 2-4-8-12 - hour time ranges with illuminated time indicator
- Ideal for bathroom lights, fans, ventilators and more

INSTALLATION

WARNING: INSTALLATION SHOULD BE MADE BY A LICENSED ELECTRICIAN.

WARNING:

TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF POWER AT CIRCUIT BREAKER AND TEST THAT POWER IS OFF BEFORE WIRING.

Note: Neutral wire is required for this timer to function.

This timer is not compatible for 3-way switches.

FOR INDOOR USE ONLY.

DO NOT EXCEED RATED CAPACITY:

120V / 60 Hz

15A / 1875W Resistive (general purpose)


8A / 1000W Tungsten (lighting)

8A / 1000VA (ballast)

1/4 HP

INSTRUCTIONS

1. Turn power OFF at the circuit breaker or remove the fuse.
2. Remove existing wall plate and switch, if applicable. Please note two black wires connected to switch.
3. Ensure neutral (white) wire is present in the junction box. If this wire is not present, additional wiring will be necessary before installation can be completed.
4. Strip 3/8" insulation from each wire, which is required for installation.
5. Connect the green wire from the junction box to the green wire from the timer.
6. Connect the white wire from the timer to the white wire(s) in the junction box. Secure connection using the wire connector (orange) included in the package.
7. Connect the black wire from the timer to the HOT wire (previously connected to the switch) and connect the red wire from the timer to the second wire (previously connected to the switch). Note: If not sure which wire is HOT, connect black wire from timer to one of the black wires, previously connected, and the red wire from timer to the second black wires (previously connected to the switch). Secure connections with wire connectors.
8. Carefully shift all wires to provide room for timer in the junction box.
9. Secure timer to box with screws included, and install cover plate.
10. Reconnect your electrical power.
11. Test the timer.
Note: If the timer is not functional, interchange two black wires previously connected to switch (see #7 above).

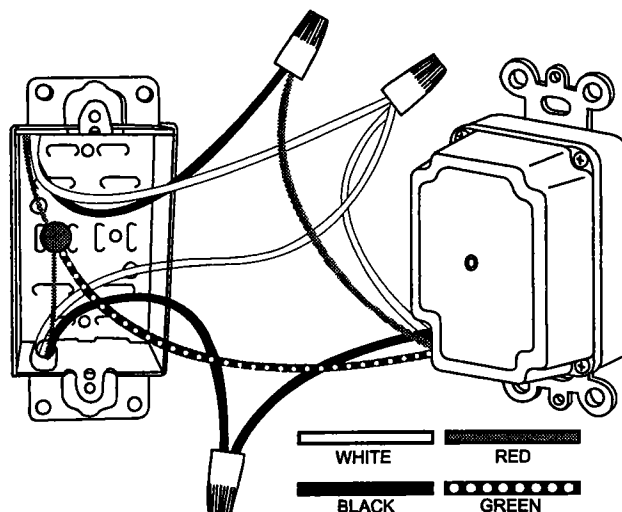

OPERATIONS

1. **59007/59720/59726 TIME SETTING**
To set timer, press button repeatedly to select one of the four time settings (5 minutes - 10 minutes - 15 minutes - 30 minutes). The illuminated LED indicates the time selected.
2. **59008 TIME SETTING**
To set timer, press button repeatedly to select one of the four time settings (10 minutes - 20 minutes - 30 minutes - 60 minutes). The illuminated LED indicates the time selected.
3. **59013 TIME SETTING**
To set timer, press button repeatedly to select one of the four time settings (1 hours - 2 hours - 4 hours - 8 hours). The illuminated LED indicates the time selected.
4. **59014 TIME SETTING**
To set timer, press button repeatedly to select one of the four time settings (2 hours - 4 hours - 8 hours - 12 hours).
5. **MANUAL OFF**
To turn timer OFF manually, press the push button repeatedly until "OFF" LED is illuminated.



Coleman Cable, Inc.
Waukegan, IL 60085
© 2008 Coleman Cable, Inc.
Printed in China