


# MODEL: T8805P101C


## PROGRAM TIME SWITCH WITH 14-DAY "SKIPPER®" WHEEL

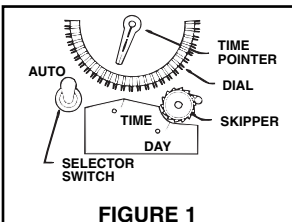

FOR UP TO 60 OPERATIONS PER DAY  
**SWITCH RATING: SINGLE POLE SINGLE THROW**  
**15 AMP., 1/2 H.P.125 VOLTS A.C.**  
**CLOCK MOTOR: 125 VOLTS - 60 HZ.**



**FIGURE 1**

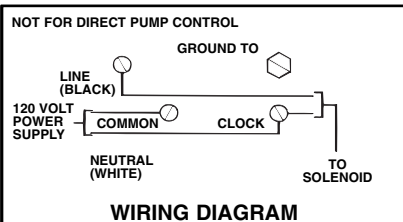

**WIRING DIAGRAM**

### PROGRAMMING INSTRUCTIONS:

- 1. TO SET FIRST ZONE:** For watering, push gold pin into slot on yellow dial at desired ON time. For each 12 minutes of additional watering add one pin **WITHOUT** skipping a slot.
- 2. TO CHANGE ZONES:** Leave one blank slot on yellow dial after ON line (gold pin), and valve will automatically advance to next zone.
- 3. TO SET ADDITIONAL ZONES:** Repeat steps 1 and 2. **REMEMBER** to leave blank space between zones
- 4. TO SET TIME OF DAY:** Turn yellow dial **CLOCKWISE**, until correct line is at end of silver time pointer. Do **NOT** turn silver pointer.
- 5. TO SKIP DAYS:** Turn black skipper wheel **COUNTER-CLOCKWISE** until today's day is in front of "14" arrow. Press pins **DOWN** on days of **NO** watering. The skipper wheel must have all pins **UP** for daily watering.
- 6. PUT SELECTOR SWITCH IN AUTO:** This switch can be used to turn the system **ON** or **OFF** for manual operation without affecting the set program.

**IMPORTANT NOTICE:** Use the one silver pin that is located at Midnight on the yellow dial, it advances the skipper wheel automatically. Do **NOT** use multiple silver pins.

Follow The National Electrical Code and local code requirements when installing this time switch.

**CAUTION:** Always disconnect power at main panel before servicing this Switch or the equipment it controls.

**INTERMATIC INCORPORATED**  
SPRING GROVE, ILLINOIS 60081-9698