

MODEL: T8845PV




LR3730

24 HR. DIAL TIME SWITCH WITH 14-DAY "SKIPPER®" AND TRANSFORMER IN DUSTPROOF/RAINPROOF PLASTIC ENCLOSURE

INPUT: 110/125 VOLT A.C.

OUTPUT: 24 VOLT - 20 VA

CLOCK MOTOR: 110/125 VOLTS - 60 HZ.

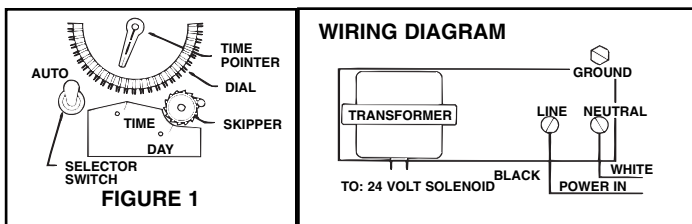

PROGRAMMING INSTRUCTIONS:

- 1. TO SET FIRST ZONE:** For watering, push gold pin into slot on yellow dial at desired ON time. For each 12 minutes of additional watering add one pin **WITHOUT** skipping a slot.
- 2. TO CHANGE ZONES:** Leave one blank slot on yellow dial after ON line (gold pin), and valve will automatically advance to next zone.
- 3. TO SET ADDITIONAL ZONES:** Repeat steps 1 and 2. **REMEMBER** to leave blank space between zones
- 4. TO SET TIME OF DAY:** Turn yellow dial **CLOCKWISE**, until correct line is at end of silver time pointer. Do **NOT** turn silver pointer.
- 5. TO SKIP DAYS:** Turn black skipper wheel **COUNTER-CLOCKWISE** until today's day is in front of "14" arrow. Press pins **DOWN** on days of NO watering. The skipper wheel must have all pins **UP** for daily watering.
- 6. PUT SELECTOR SWITCH IN AUTO:** This switch can be used to turn the system ON or OFF for manual operation without affecting the set program.

IMPORTANT NOTICE: Use the one silver pin that is located at Midnight on the yellow dial, it advances the skipper wheel automatically. Do **NOT** use multiple silver pins.

CAUTION: Always disconnect power at main panel before servicing this Switch or the equipment it controls.

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698