

TORK

POOL/SPA PANEL

PP-100R-2P4

Pool/Spa Control Panel With Two Time Switches In Rainproof Enclosure With Reversible Door



One or more of the following patents apply: 6,827,230; 6,791,039. Other Patents Pending.

Panel Rating	INPUT	100A, 120/240V, 60Hz, Single Phase 3 Wire AC, 10KA Short Circuit Rating
	OUTPUT	100A, 120/240V, 60Hz, Single Phase 3 Wire AC, 5 spaces, 10 Maximum Circuits, (2) 7.5HP@240V
Enclosure Rating	NEMA 3R Outdoor Enclosure • Removable & Reversible Front Door	
Switch Rating of each Time Switch	DPST (2 NO Contacts); Auxiliary NC Contact; 40A Resistive/Inductive per pole 7.5 HP (40FLA) @240V (NO Contacts), 15A General Purpose/Resistive @120V (NC Contact)	

! IMPORTANT SAFETY INSTRUCTIONS !

ATTENTION: Read carefully before attempting to install this control. Failure to comply with instructions could result in personal injury and/or property damage!

1. This control must be installed in accordance with National and local electrical code requirements. Use the wiring information table below for proper wire gauge selection & screw tightening torque requirements.
2. Use the circuit breaker selection table below for list of suitable circuit breaker manufacturers for use in this panel. Follow manufacturers installation instructions. For GFCI circuit breakers, follow manufacturers test procedures. Circuit Breakers must have an AIC rating of 10,000 amps or greater.
3. Do not exceed the ratings of this device, and current capacity of conductors.
4. Install only **UL approved wiring devices** inside of panel. Follow device manufacturer's installation instructions.
5. This control should not operate any equipment which would cause bodily injury or property damage should it be activated unexpectedly. **KEEP FRONT COVER PANEL CLOSED AT ALL TIMES.**

INSTALLATION & WIRING INSTRUCTIONS

Bonding between conduit connection is not automatic and must be provided as part of the installation. The enclosure must be properly grounded.

1. To install time switch into control panel, insert bottom edge of mechanism into universal mounting plate. Push top front edge of mechanism down into the mounting plate. You will hear a click indicating that time switch is securely attached to the bracket. For Tork 1100 series time switches use adapter plate (part #AAP, sold separately).
2. Use solid or stranded COPPER wire only. For Supply Connections, use conductors rated minimum 90 °C.

CONTROL PANEL MOUNTING

Secure control panel to suitable vertical surface or other support using the various mounting holes provided inside of enclosure.

IMPORTANT! ATTACH WIRES TO DEVICES PRIOR TO INSERTING THEM INTO INSIDE WIRING COMPARTMENT

INSTALLING WIRING DEVICES INTO INSIDE WIRING COMPARTMENTS

WHILE-IN-USE INSIDE WIRING COMPARTMENT (IWC): Allows installer/user to install time controlled receptacles which require a "While-In-Use" outdoor weatherproof cover.


TO INSTALL DEVICE:

1. Loosen captive screw at base of Inside Wiring Compartment(IWC).
 2. Fold out IWC to gain access to rear side.
 3. Open Lever Arm.
 4. Remove appropriate KO for device being installed. Insert bottom mounting bracket of wiring device into base of IWC.
 5. Close Lever Arm to lock devices into IWC.
 6. Fold IWC back into control panel and secure captive screw.
- IWC accepts (2) wiring devices.


SECONDARY WIRING DEVICE PLATE (WP-2G):

Allows for additional wiring devices such as switches, X-10 and UPB type control devices to be installed into control panel.

1. Remove Inside Compartment Cover Plate (ICCP). See Diagram.
2. Remove the Secondary Wiring Device Plate (WP-2G) from the ICCP by loosening captive screws
3. Open Lever Arm on back side of wiring plate.
4. Insert bottom mounting bracket of wiring device into base of WP-2G.
5. Close Lever Arm to lock devices into WP-2G plate.
6. Insert left edge of WP-2G into receiving bracket on left inside edge of control panel.
7. Re-attach ICCP to control panel.
8. Re-tighten captive screws on ICCP to secure Wiring Plate.

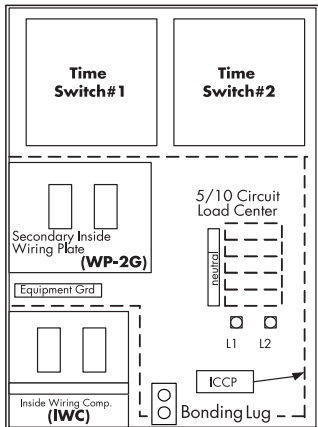

WIRING DIAGRAMS

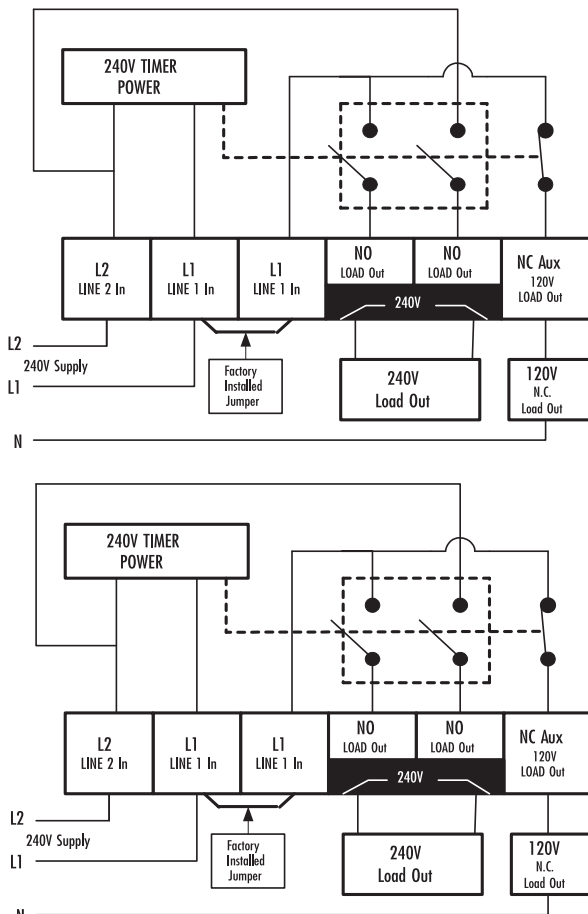

CIRCUIT BREAKER SELECTION TABLE						
MANUFACTURER	CIRCUIT BREAKER TYPE (xx=circuit breaker amp rating)					
	1" (Single Pole)	2" (Double Pole)	1" (2) Single Pole	2" (2) Single Pole (1) Double Pole	2" (2) Double Pole	1" or 2" (1 or 2 Pole)
CUTLER HAMMER	BR1xx	BR2xx	BRxx-xx	--	--	GFCB
GE	THQL1xx	THQL2xx	THQP2xx	--	--	THQLxxGFP
MURRAY/SIEMENS	Type MP MP1xx	Type MP MP2xx	Type MHT MPxx-xx	Type MHT MP2XX-XX	Type MHT MP2XX2XXCT2	Type MP MP1xxGF MP2xxGF
SQUARE D (HOME LINE)	HOM1xx	HOM2xx	HOMTxx xxCP	HOMTxx xx2xx	--	HOMxxGFC

WARNING: To avoid accidental contact with live parts, close all openings with breakers or the appropriate filler plates

WIRING INFORMATION - COPPER CONDUCTORS							
CONNECTOR	Wire Range Data Sol / Str	Lug Tightening Torque (LB-IN)		Wire Ampacity			
		Wire Size	Torque	Wire Size	Max Amps 90 C	120V HP	240V HP
Main Lugs	1-6	10-14	32-35	14	25	1/2	2
				12	30	1	3
Neutral Main	1-6	8	36-40	10	40	3	5
				8	55	2	7.5
Neutral Bar	6-14	4-6	41-45	6	75	-	-
				4	95	-	-
Equipment Grd. Bar	4-12	2	50	2	130	-	-
				1	150	-	-
Bonding Lug	4-12	1	50	1	150	-	-

TIME SWITCH OPERATING INSTRUCTIONS

1. To set time: Rotate clock face in a clockwise direction until proper time is lined up with the black arrow.
2. To set "ON" & "OFF" times: Push appropriate trippers IN (towards center of clock) for OFF and OUT (Away from center of clock) for ON.
3. Modes of operation: (Using 3 position black rocker switch)
 - a) TIMER/Auto: Automatic operation according to ON/OFF settings
 - b) OFF/Standby: Load stays OFF
 - c) ON: Load stays ON