

# MODEL: T173CR

24 HR DIAL TIME SWITCH WITH "SKIPPER®"  
AND SPRING-WOUND CARRY-OVER MOTOR



DOUBLE POLE SINGLE THROW DPST)  
IN TYPE 3R RAINPROOF ENCLOSURE,


40 AMP. RESISTIVE, INDUCTIVE, TUNGSTEN OR

1000 VA. PILOT DUTY PER POLE - 120/208/277 VOLT AC;

2 HP (24 FLA) - 120V AC; 5 HP (28 FLA) - 240V AC.

**CLOCK MOTOR: 110-125 VOLTS - 60 HZ.**


*CLOCK MOTOR VOLTAGE AND CYCLE MUST BE AS SPECIFIED. TO ORDER REPLACEMENT, INDICATE ART NO. (WG--) ON MOTOR COVER.*

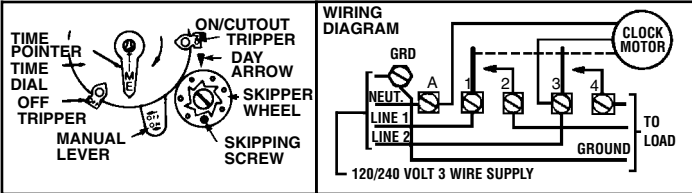

**WIRING INSTRUCTIONS:** To wire switch follow diagram above. Use solid or stranded COPPER only wire with insulation to suit installation. See gauge selection table for normal service applications. To make power connections remove 1/2 inch of insulation from wire ends. Insert bare ends of wire under the pressure plate of terminals. Use 3/16 or larger screwdriver to tighten terminal screws firmly. (25 lb-in minimum).

**REPLACE INSULATOR BEFORE TURNING ON ELECTRICITY.**

MINIMUM COPPER WIRE SIZE (AWG)	MAX. LOAD (AMP)	MIN. INSULATION TEMP(°C)	75°C INSULATION MAX. MOTOR LOAD (HP)			
			SINGLE PHASE		3 PHASE	
			120 V.	240 V.	208 V.	240 V.
14	15	60	1/2	2		
12	20	60	1	2 1/2	N/A	N/A
10	30	60	2	3		
8	40	75	-	5		

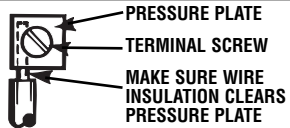

## PROGRAMMING INSTRUCTIONS

1. TO SET "ON" AND "OFF" TIMES: Hold trippers against edge of **CLOCK-DIAL**, pointing to time (AM or PM) when **ON** and **OFF** operations are desired, tighten tripper screws firmly. For additional tripper pairs on **CLOCK-DIAL** order 156T1978A.
2. TO SET TIME-OF-DAY: Pull **CLOCK-DIAL** outward. Turn in either direction and align the exact time-of-day on the **CLOCK-DIAL** (the time now, when switch is being put into operation) to the pointer. **DO NOT MOVE POINTER.**
3. TO SKIP OPERATION(S) ON SELECTED DAY(S): Insert **SKIPPING SCREW(S)** in **SKIPPER WHEEL** for day(s) automatic operation(s) is/are NOT required. Tighten screws firmly. Move **MANUAL LEVER** to "OFF" and rotate **SKIPPER WHEEL** to locate correct day-of-week opposite **DAY ARROW**--"YESTERDAY" if **ON/CUTOUT TRIPPER** has not yet advanced wheel "TODAY" if it has.

## OPERATING INSTRUCTIONS

- TO OPERATE SWITCH MANUALLY: Move **MANUAL LEVER** below **CLOCK-DIAL** left or right as indicated by arrows. This will not effect next operation.  
**CAUTION: TO AVOID SLOW SWITCH ACTION FAILURE, DO NOT OPERATE SWITCH MANUALLY NOR PLACE A TRIPPER 4 HOURS PRIOR TO ON/CUTOUT TRIPPER SWITCHING.**
- IN CASE OF POWER FAILURE, reset **CLOCK-DIAL** to proper time-of-day. See programming instructions.

**INTERMATIC INCORPORATED**

SPRING GROVE, ILLINOIS 60081-9698