use nstructions for Homeowner

TC Time Controls

Separate manually operated switches are provided for b	vitches a	re provide	d for b
the heating and DHW services. A third switch provides a selection between "constant" and "timed" for both services.	A thirds	witch prov	rides a
The following programmes can be selected.	n be selec	sted.	200
Programme	Htg	DHW	tim
Required.	switch	switch	cons
	position	position	swi
			posi
Heating & hot water timed	on	on	Tir
Heating & hot water constant	on	uo	Cons
Hot water timed, Htg off	off	on	Tin
Hot water constant, Htg off	JJO	on	Cons
Heating timed, hot water off	no	off	Tir
Heating constant, hot water off	uo	off	Cons
Roth carricae off	off	off	Tim

ed/ stant tich tion ned stant ned stant stant stant

Flue Vale

http://waterheatertimer.org/Intermatic-timers-and-manuals.html#wh

Towerchron Model TC. Time Switch -Installation Sheet

Applications

- 1. Any simple timed switching application up to the stated rating.
- 2. Domestic Heating Systems where both heating and hot water are required to switch on and off at the same time.
- 3. Warm Air Systems, or low voltage valves or boilers.

Specification


Rating: 250 v AC 10 amps resistive load.

Fitting: Surface mounted

Dimensions: Approximately 4.2" (106mm) high x 4.4" (113mm)

wide x 2.6" (65mm) deep. Max. ambient temp. 50°C.

Internal Wiring Diagram

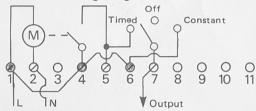

N.B.

- 1. For mains voltage applications place links between 1 & 4 Links must be suitable for full load current.
- 2. Installation must be carried out by a qualified electrician and conform to current I.E.E. regulations.
- 3. Mains supply must be suitably fused (usually 3A) and provision made for class A circuit disconnection
- 4. Control is suitable for fixed wiring only.

Installation

- 1. Loosen fixing screw at bottom of unit and remove terminal cover.
- 2. For surface fixing screw unit to wall with countersunk No. 8 woodscrews using fixing holes 1 & 2 (see fig 1).
- When surface mounted, a cable knockout is provided on the bottom edge of the terminal cover.
- Carry out wiring installation using appropriate diagram as shown. For wiring systems not covered by this sheet refer to Tower Flue Components Ltd.
- 5. Replace terminal cover and secure cover fixing screw.



Fixing holes 1 & 2 for surface mounting

Setting Correct Time and required On-Off periods — refer fig 2.

Remove black clock cover by gently pulling outwards. Using centre clock adjuster, turn clock fingers clockwise to correct time of day.

The Towerchron clock is mechanically linked to a 24 hour outer dial which must also read the correct time of day. Check that \triangle pointer is opposite the correct hour of day on the 24 hour dial.

If not continue rotating centre clock adjuster clockwise until correct time of day is reached again. Clock is now set. See example below:

Example - time of day 4 p.m.



Time Pointer 24 hour dial

Programme Advance Knob

Setting On-Off periods -

- 1. Decide on the time of 'On' periods required.
- Position tappetts in outer dial as shown. Red tappetts switch On, blue tappetts switch Off. For example, if you want to switch on between 7 and 10 am and then between 4pm (16.00 on 24 hour dial) and 11pm (23 on dial), tappetts are positioned as shown in
 - In the event of power cuts etc, remember to reset the clock by turning clock fingers clockwise only using clock adjuster knob.
- 3. Fig 3. illustrates tappetts being inserted into outer dial short leg of tappett faces middle of clock.



Fig 2



Fig 3

Tower - above the rest **Tower Flue Components Limited**

Vale Rise, Tonbridge, TN9 1 TB Kent

Setting On-Off p



Mid 23

2

6

 ∞

D.

 $\underline{\circ}$

2

Time of Day/24 hour

Fig 1