

7-Day Digital Timer

User Instructions

! WARNING – Risk of fire or electric shock

- For indoor use only in dry locations.
- Do not exceed capacity.
- Do not use timer with devices that could have dangerous consequences due to inaccurate timing, such as sun lamps, heaters, etc.
- Plug directly into receptacle.

NOTICE

- No user serviceable parts.

1—Charge the Battery

Plug timer into wall outlet for a few minutes to charge internal battery.

NOTE: If it would be easier, you can now unplug the timer to set it.

2—Clear the Memory

Press the **RESET** button with a pencil or paper clip to erase any previous settings.

3—Select AM/PM Format


1. Press and hold the **CLOCK** button for about 5 seconds until display shows 24H or 12H, then release.
2. Press the **HOUR** button as many times as necessary to change display to "12H".
3. Press the **CLOCK** button to restore the normal clock display. The letters "AM" should show in upper left corner of the display.

4—Set Time of Day

1. Press and hold the **CLOCK** button.
2. At the same time, press the **HOUR** and **MINUTE** buttons as necessary to advance the display to the correct time.
3. Hold down the **DAYS** button until the display shows the correct day.

5—Set ON/OFF Times

1. Press the **PROGRAM** button once to display the first ON/OFF setting—"1 ON --:--".
2. Press the **MINUTE** and **HOUR** buttons as necessary to set the ON time you want.
3. Press the **DAYS** button as necessary to choose the day or group of days you want for the time setting.
4. Press the **PROGRAM** button again to display the second ON/OFF setting—"1 OFF --:--".
5. Repeat the procedure to create the OFF setting.
6. Repeat Steps 1 thru 5 for additional ON/OFF settings.
7. Press the **CLOCK** button to exit from PROGRAM mode.

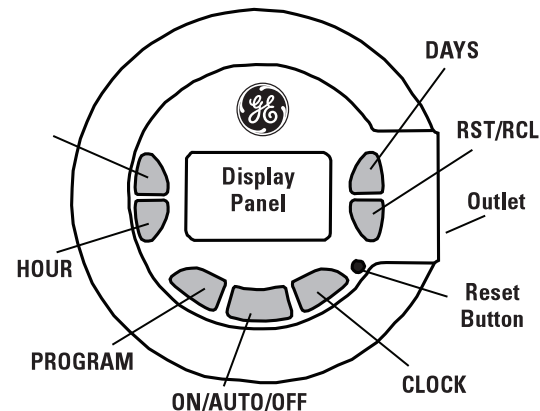

Things to know about ON/OFF times:

- Repeatedly pressing the **PROGRAM** button cycles through the possible 20 ON/OFF pairs: 2 ON, 2 OFF, 3 ON, 3 OFF, etc.
- The display panel automatically returns to time of day if you don't press any buttons for 15 seconds.
- If you are interrupted before completing a setting, simply press the **PROGRAM** button until you reach the setting where you left off.

6—Review ON/OFF Settings

It is important to review all 20 settings, even if you only used a few, to make sure there are no extra, unintended settings.

1. Press the **PROGRAM** button (hold down to scroll) until the display cycles through all 20 ON/OFF pairs.
2. Stop on any setting you want to remove or change.

To Revise a Setting

1. Press the **PROGRAM** button (hold down to scroll) until the display shows the setting you want to revise.
2. Press the **HOUR**, **MINUTE** and **WEEK** buttons as necessary to revise the displayed ON or OFF time and day(s).

To Remove or Restore a Setting

1. Press the **PROGRAM** button (hold down to scroll) until the display shows the setting you want to remove or restore.
2. Press the **RST/RCL** button.
 - If removing, the display will replace the setting with dashes.
 - If restoring, the display will show the previous setting.

To Operate the Timer

1. After setting the timer, plug it in and connect the device to be controlled.
2. Press the **ON/AUTO/OFF** button as necessary to display:
 - ON**—The timer remains ON and ignores your settings.
 - OFF**—The timer remains OFF and ignores your settings.
 - AUTO**—The timer follows your settings.